



Porodo Soundtec

**VIBE BAR
PORTABLE STEREO SPEAKER**

SKU: PDWBT512BK

Table of Contents

Product Overview	2
Specifications	2
Pairing and Button Guide	3
Schematic View	4
Product Function	5
Safety Precautions	6
Disposal	6
Warranty	7
Contact Us	7

Product Overview

The Porodo Soundtec Vibe Bar Portable Stereo Speaker is a compact and stylish audio device designed for powerful stereo sound and portability. It features FM radio playback, USB-C fast charging, and a multi-function button for convenient control. With up to 6 hours of playtime, it's ideal for travel and outdoor use. The sleek, modern design and durable build make it a reliable companion wherever you go, bringing clear, immersive sound to every moment.

Specifications

Input	DC 5V
Battery Capacity	1200mAh
Speaker Power	5W × 2
Bluetooth Version	5.4
Operating Range	10m
Operating Frequency	2.4GHz - 2.48GHz
Charging Interface	USB-C
Charging Time	3H

Playtime	6H (At 70% Volume)
Standby Time	6H
SNR	≥75dB
Product Size	6 × 8 × 24cm
Product Weight	435g
Model Number	PDWBT512

Pairing and Button Guide

A. Connect and Pair

1. When the speaker is off, press and hold the power button for 2 seconds.
2. A power-on sound will play, and the speaker will automatically enter pairing mode, making it detectable by other devices.
3. Enable Bluetooth on your phone and search for available devices.
4. Select PD-WBT512 from the list.
5. When pairing is successful or the device reconnects automatically after startup, a confirmation tone will sound.

B. Using Bluetooth

1. Power On

- 1.1 Press and hold the power button for 2 seconds.
- 1.2 When the speaker is off, holding the power button for 2 seconds will power it on and automatically enter pairing mode. A tone will confirm activation, and the speaker will become detectable to other devices.

2. Power Off

2.1 Press and hold the power button for 3 seconds.

2.2 When the speaker is on, holding the power button for 3 seconds will turn it off. A tone will confirm shutdown.

C. Bluetooth Controls

1. Power Button (⏻)

Answer a call: Short-press the power button.

End a call: Short-press the power button again.

Reject a call: Press and hold the power button for 1 second.

Switch modes (BT/AUX/TF/FM): Double-press the power button. A tone will indicate mode change.

Disconnect Bluetooth/TWS: Double-press the + and – buttons simultaneously.

FM radio mode: Triple-press the power button to start automatic search.

Pause/Play music: Short-press the power button.

2. Increase Volume Button (⊕):

Increase volume: Short-press the + button.


Next track or station: Press and hold the + button.

3. Volume Down Button (⊖):

Decrease volume: Short-press the – button.

Previous track or station: Press and hold the volume down button.

Schematic View

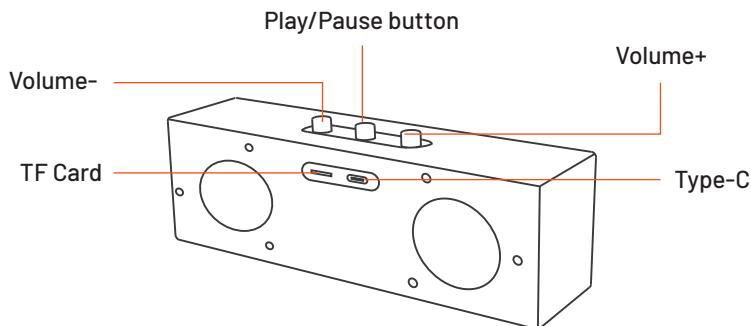

Note: This is product's back view.

Product Function

1. TWS pairing

When two speakers are turned on, don't connect to any Bluetooth devices before TWS pairing. Press and hold the – and + key for 2 seconds on either speaker to perform TWS pairing. After successful pairing, there will be a beep sound indicating successful pairing.

Turn on your Bluetooth devices and search for the pairing name of PD-WBT512, then tap to connect it. After successfully connecting with Bluetooth, it can play this song from these speakers.

Press and hold the – and + key for 2 seconds (either one) to disconnect the TWS pairing.

2. Battery charging Light

The red light remains on while charging; after fully charged, the red light goes out.

3. Bluetooth pairing

Press and hold the power button for two seconds to turn on this speaker. Turn on your Bluetooth devices and search for the pairing name of PD-WBT512, then tap to connect it. After successfully connecting with Bluetooth, it can play this song from these speakers.

Press and hold – and + key for 2 seconds (either one) to disconnect the TWS pairing.

4. Aux in Setting

Inserted an audio cable to the AUX IN JACK of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc. It will switch to AUX mode automatically or press the M button to switch to AUX MODE from the control panel.

5. TF card input

Insert TF card directly for playing.

6. Radio FM function

Power on this unit and swatch to FM mode, triple clicking the power button to enter auto scan feature and automatic storage of radio stations.

Press and hold the + button to select the next radio station, press and hold the - button to previous radio station.

When using the FM function, an AUX cable must be inserted as an antenna.

Safety Precautions

- A.** Do not use abrasive detergents to clean this product.
- B.** Do not allow the product to be heated or near a fire source, such as a cooking stove.
- C.** Do not expose this product to direct sunlight for long periods of time.
- D.** Do not dispose of this product in fire to avoid explosion.
- E.** Do not use this product in the rain.
- F.** Do not attempt to disassemble this product to make any modifications as it does not contain any repair components.
- G.** If you do not intend to use this product for a long time, please store it in a dry environment, avoid extreme temperature and dust.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**