





Part Name

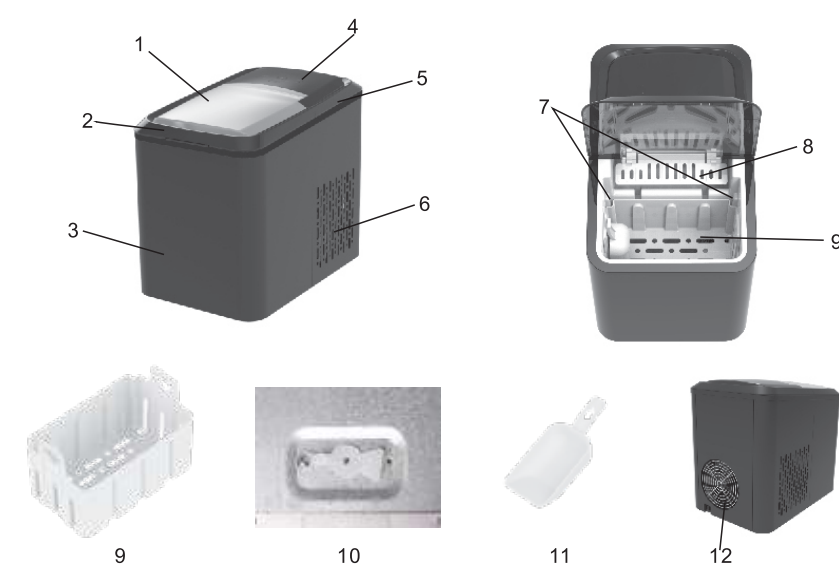


No.	Name	No.	Name
1	transparent window	7	Infrared sensor for ice full detection
2	front lid	8	ice scoop panel
3	main body	9	ice bucket
4	control panel	10	silicone plug
5	back lid	11	ice scoop
6	air inlet	12	air outlet

Circuit Diagram

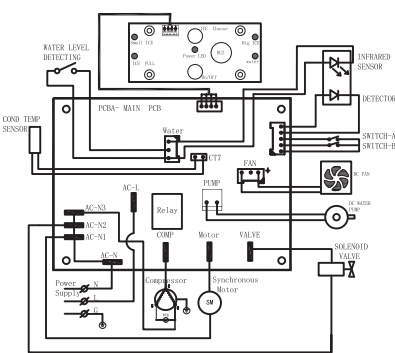

Instructions and steps Control Panel

- A) Ice full indication
B) Power indication C Lack of water indication
D) ON/OFF button
E) Small ice indication
F) Small/large ice button
G) Large ice indication

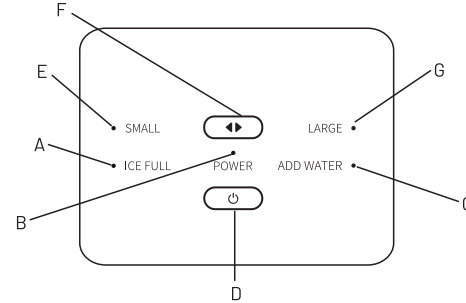

Attention

- After receiving the machine ,please leave it alone for over 24 hours and then start up the machine.
- When adding water to the water tank, please make sure the silicone plug at the bottom of the machine is plugged.
- Do not use water containing impurities or with solid particles, pure water is recommended.

Open the package

- Remove all the external and internal packages and check if all parts are inside.
- Take out the ice storage bucket and wash it in ambient clean water and then use some ambient clean water to wash the water tank.
- Wash the evaporator columns with clean water or alcohol.
- Please keep the ice maker away from direct sunlight, heat or radiation. Place the ice maker horizontally and make sure there is at 15cm gap between the sides and rear.
- The ice maker should be placed in a suitable socket for power supply.

The ice maker is power on Attention

- The wrong use a ground wire can have the risk of electric shock.
- Do not connect the power cord to the socket with wet hands, otherwise electric shock may occur.
 - For your safety, the ice maker must use a reliable grounding power supply.
 - The machine needs standard 220~240V/50Hz/10A power supply with grounding.

Ice maker cleaning

- Before using the ice maker, cleaning the entire machine thoroughly is strongly recommended.
- Take out the ice bucket.

- Open the silicone plug at the bottom of the machine body and drain the water inside the water tank.
- After diluting the soft cloth with neutral cleaner, clean the water tank and external part of the machine.
- Rinse the interior with clean water.
- Install the silicone plug at the bottom of the machine and make sure it is installed well.

- Do not use chemicals, such as alcohol
- Do not use steel ball, hard brush and other tools to clean the surface of the product.
- Do not expose product' s power line and packaging accessories to the sun.
- Do not tilt the machine to over degrees or turn it upside down, otherwise the cooling system may not work properly.
- The machine is not been used for a long time, the water inside the water tank should be drained and the water tank should be wiped.

Use the ice maker(indoor)

- Open the front cover, take out the ice bucket and add some water into the water tank.(the water level is recommended below the maximum water level)
- Put the ice bucket back and make sure the bucket is installed well, if not, please press gently to the bottom of the bucket to put it in place.
- Press the " " button on the control panel, choose the size of ice cube tha you need. Then press the "POWER" button to start ice making circulation.
- The first cycle for ice production is around 9 minutes. It depends on the room temperature , the size of the ice cube also depends on water temperature and ambient temperature.
- After the ice maker starts, the water level in the water tank should be checked frequently. If the water level is too low, the water pump can not pump out water, the ice maker will stop automatically, the lack indication constant brightness to indicate lack of water, at the same time the buzzer starts to beep , at this moment, the water tank should be filled below the maximum water level and then press "ON / OFF" to start ice making again.
- If the ice bucket is full of ice , the ice maker will automatically stops ice making and the full indicator constant brightness . At the same time, the buzzer starts to beep, when the ice position is lower than the infrared detection position, the machine starts to work again.
- Stop/cancel ice making. To stop or cancel ice making ,press the "ON/OFF" button to stop ice making.And will be in standby mode.
- It is recommended to change water once every 24 hours to keep the water clean.

If the ice maker is not used for a long time, please drain the water inside the water tank and wipe the water tank ,at the same time, please also cut off the power supply and pull the plug out of the socket.

Self- cleaning function

Plug the machine, when the power indicator is flash, keep press the power button for 3 seconds, it will start self-cleaning: Water will be ran inside the machine to wash itself, repeat for 10 mins. You need drain the water tank and refill after the self-cleaning, then start to making ice.

Safety Precautions

Please read the safety instructions carefully before use and use it correctly. The safety precautions listed here are important matters related to safety, please follow them.

The signs and meanings are shown as below.

Sign instructions

Sign	Meaning of the sign
	Warning
	Attention

Signs

Sign	Meaning of the sign
	It means prohibited(prohibited behaviour). Specific contents are in the sign or icons, instructions and statements near the sign .
	It means enforced actions(must be enforced) Specific actions are shown in the sign or in the icons ,instructions and statements near the sign.
	It means matters needs to pay attention to. Specific are shown in the sign or in the figures, instructions and statements near the sign.

Warnings

	Sign	Meaning of the sign
1		Do not disassemble,repair or refit the machine, or it may cause fire, electric shock or accidents, for repair, please contact your supplier.

	Sign	Meaning of the sign
2		Before doing daily maintenance, please pull the plug out of the socket, disconnect the power supply first, otherwise it may cause electric shock and short circuit.
3		Please hold the insulated part of the power plug in the front section and pull out the power plug. Do not pull the wire, otherwise, the power cord may break or catch fire.
4		Please wipe the dust on the power plug frequently, otherwise fire may occur due to poor insulation. Please pull out the power plug and wipe it clean with dry cloth.
5		Do not use wet hands to plug and unplug the power supply , otherwise it may cause electric shock, burn or other injuries.
6		If not using it for a longtime, please pull out the power plug after cutting off the power supply and drain the remaining water from the drainage outlet and store it in dry condition inside.
7		Do not immerse the machine in water or use it in bathroom or where the machine may be splashed with water , otherwise it may cause short circuit or electric shock.
8		When the ice maker starts or stops , start the relay, thermal protector and other electric parts will have click sound because of the actions, when the refrigerant flows in the pipe, there will be flowing sound, during ice making, when the machine is releasing the ice, the system will have click sound ,these are all normal phenomena, not malfunction.
9		1.In case of abnormality or failures, please stop using immediately, otherwise it may cause smoke, fire and electric shock, please cut off the power supply and pull the power plug out of the plug, and then please contact the supplier and be repaired by designated maintenance service provider, otherwise it may cause smoke, fire and electric shock. Please cut off the power supply of the machine immediately and pull the power cord from the socket and then contact your supplier and customer service and repair it by maintenance service provider.
10		1.When placing the machine, please leave plenty of space for it, otherwise the refrigerant may leak and stay, this may lead to fire or serious accidents.
11		1.Do not use it in unstable positions, otherwise injuries and faults may occur due to falling or topping.it may fall or topping. 2.Please pay special attention:when placing the machine, do not put it stand out of the platform.

	Sign	Meaning of the sign
12		1.Do not damage the power cord or plug! Do not scratch, process the power cord and plug, do not approach heater,do not bend, twist forcibly,pull it hard or place the weight on it. 2.Use damaged power cord and plug may lead to electric shock, short circuit and fire.
13		1.Do not use damaged power plug or loose socket, otherwise it may lead to electric shock or fire due to heat.
14		1. Do not exceed the rated standard of the socket(a bove 10A), applicable voltage is 187V~242V,frequency is 50Hz, and please make sure there is reliable grounding. 2.If the voltage exceeds the limit, it may heat, cause fire and electric shock.
15		Please use separate socket for the machine, do not share one socket for multiple electric appliances, otherwise it may lead to electric shock, short circuit and fire.
16		Please plug the plug into the socket completely, if not, it may lead to electric shock or fire due to heat.
17		1.Do not damage the cooling circuit(piping) 2.If refrigerant leaks, it may lead to fire or serious accidents, meanwhile causing the machine not to function properly
18		Do not let the children use the product and please do not use it in positions where is accessible by children, otherwise it may lead to burn, electric shock and injuries.
19		If power cord is damaged, it must be replaced by professionals in the manufacturer' s maintenance department or similar department to avoid danger.
20		Do not extend hands into the mechanical parts at the back side of the machine, otherwise it may lead to burn or injuries caused by heat parts, which may also cause damage to the machine.
21		When repairing the product: do not tilt the machine over 45 degrees or turn it upside down, otherwise the compressor and cooling system may not work properly.
22		Do not use it in places with hot objects or dirty air . Please keep it in a well ventilated , cool and dry place where the height of water level can be ensured.To ensure the air circulation , please keep the machine away from the walls or furniture for at least over 15 cms.

	Sign	Meaning of the sign
23		Before using the machine ,please wash the water tank and ice bucket frequently.
24		To ensure the ice quality, please check and wash the machine frequently, before using the machine, please replace with new water source.
25		Do not add water which exceeds the maximum water level line of the water tank. Because the ice bucket is made of white PP material, please check the maximum water level carefully, it is suggested that the water level should be 5~10mm lower than the bottom of the ice bucket.
26		Do not contact the ice making parts when the product is working .In addition, do not open the lid for use, otherwise failure may occur due to the leakage of the refrigerant which reduces ice making capacity or mix with dust.
27		When doing daily maintenance, do not remove internal sensors and touch parts forcibly, otherwise it may lead to failure or accidents.

Attention

- When using it for the first time or not use it for a long time, please flush the water tank and drain water from the drainage outlet. As there may be smell or dust, please dispose the ices from the first 2 cycles of ice production.
- When connect to the power supply initially , the ice size produced may be relatively small, this is not malfunction.
- To keep the ice maker clean and hygienic ,daily management and check are very important.After the ice maker is used for a long time ,due to the change of temperature, water quality and other use environment and aging of the product, there may be scale, mold and rust mixed into the ice.Please pay attention to the daily maintenance of the water tank and keep it clean.
- Take the machine from the package, check if there is tiny dust in the water tank and ice bucket before use.
- Please do not use water or other liquids with impurities or containing solid particles.
- The ice may have smell due to water quality. The ice from first time production after purchase may have an odor, this is not fault. After using it for several times, the smell will disappear. If you mind the smell, it is suggested to use ice maker cleaner or citric acid to clean it .It is suggested not to be consume odorous ice to avoid discomfort or other illnesses.

- To ensure ice quality, please replace water frequently. After diluting the neutral cleaner with water, use soft cloth or sponge to clean the interior and exterior of the product.
- If not using it for a long time, please pull out the plug out of the socket after cutting off the power supply of the machine and drain the remaining water from the drainage outlet, and keep the machine in a dry internal condition.

Non-Fault Descriptions

Situation	Reason
When the ice maker first starts up, the water pump pumps for 5 seconds and then stops for 5 seconds and then pumps again for 5 seconds and then stops again for 5 seconds, and then sucks water continuously for 3 minutes.	exhaust the air from the water suction pipe to prevent it produce water without water.
After connecting to the power supply and the machine is on ,the ice making	This is to detect if the ice making box is horizontal.
During ice making, the infrared light is blocked, the machine will produce ice normally, after one cycle of ice making , the infrared light is still blocked and then shows Full.	This is to remove the illusion of ice full caused by infrared misjudgment

Failure analysis and handling

Failure	Cause	Solution
Power indication light is not on .	The power plug is not plugged well or there is no electricity in the socket.	Plug the power plug correctly into the socket and make sure it is connected separately.
The machine has abnormal noise	1.The machine is not stably 2.The voltage is too low 3.The fan has foreign body	1.Please install the product in a flat position. 2.Please cut off the power supply and check if there is problem with voltage 3.First please cut off the power supply and then check if there is foreign body in the fan.

On the operation panel,the red ice full indication light is on, but there is no ice in the ice box	1.Infrared sensor adheres to foreign object. 2.Infrared sensor is broken Circuit board is broken.	1. Please cut off the power supply of the product and remove the foreign object adhered to the infrared sensor. 2.Please stop using the product and contact supplier and customer service and repair it by maintenance service provider.
On the operation panel, The lack indication is on but there is plenty of water in the tank	1. Maybe the pump is broken. 2.The water supply system is blocked by impurities	Please stop using the product and contact your supplier and repair it in designated repair service provider
Ice is mixed with impurities	There are impurities in the water tank	Please rinse the interior of the water tank
The ice has odor	Due to water quality or the ice produced first time after purchase	After using it several times, the odor will disappear
"Lack" indication light is on	1.Lack of water 2.The bottom of the water tank is blocke	Stop ice making, add water and press "ON/OFF" to start ice making again
"Ice Full" indication light is on.	1.There are too many ice in the ice bucket. 2.The ice full sensor is broken, there is no ice, but the "Full" indication light is on.	1.Take the ice from the ice bucket 2.Please stop using the product and contact your supplier and repair it by designated repair service provider
"Ice Full" indication light twinkles .	The ice scoop panel is stuck.	1.Press "ON, OFF" butt on to stop ice making. 2.Please stop using the product and contact your supplier and repair it by designated repair service provider

The ice sticks together.	1.Ice making cycle is too long. 2.Too many parts are immersed in the ice making box . 3.The water temperature inside water tank is too low.	1.Stop ice making, after the ice melts, restart the machine for ice making. 2.Adjust the evaporator. 3.Replace the water inside water tank, the water temperature is preferably between 5 and 32°C.
The ice is full but indication light is not on.	The machine is in a position with strong light, it affects the detection of the infra red light.	Move it to the darker place.
The machine is operating but not making ice.	The compressor is in start protection or refrigerant leaks.	Turn it on and off consecutively or bad contact of the plug will cause the compressor not work , wait 30 minutes and the machine will operate normally. If after over 30 minutes, the ice maker is still not started, please stop using the product and contact your supplier and repair it by designated repair service provider.


Technical Parameters

Product Name	Household ice maker
Product model	PD-LSICMV2-BK
Rated voltage	220V-240V
Rated frequency	50Hz
Water storage	Around 2.2L
Ice storage	0.7kg
Ice making time	8 mins
Ice making capacity/24hr	12kg
Climate type	SN N ST
Rated current	0.7A
Refrigerant/g	R600a/28g
Insulation type	EPS
Product size mm	360*240*320mm
Package size mm	410*285*375mm
NW/GW	8.5/9.5kg

- The product specification and appearances may change due to improvement of quality.
- The spare parts apart from the main machine is consumables, when they are missing or need replacement, please contact your supplier.
- The data above are for general reference only, they will vary due to season ,using environment and situation and temperature conditions.




اسم الأجزاء

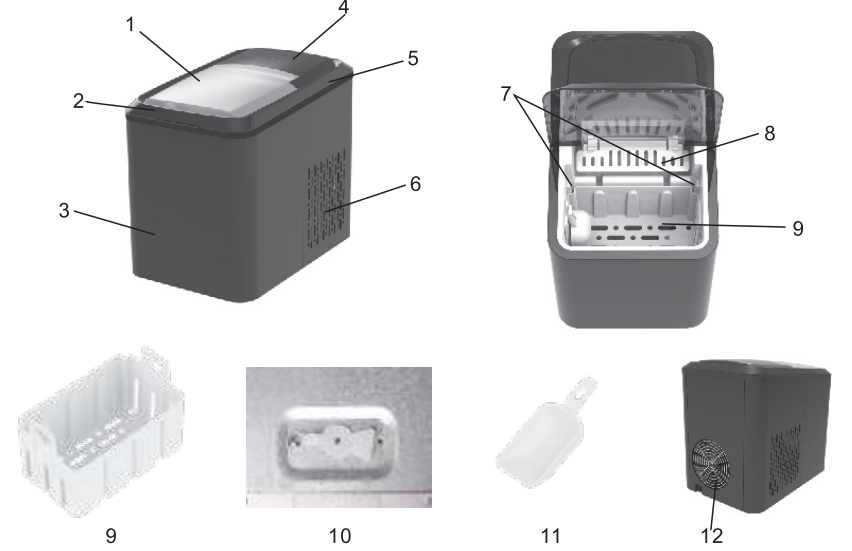

الترتيب	الاسم	الوصف
١	لوحة تحكم	لوحة تحكم
٢	خزان المياه	خزان المياه
٣	مضخة المياه	مضخة المياه
٤	ملف التبريد	ملف التبريد
٥	مروحة	مروحة
٦	فلتر	فلتر

مخطط الرسم البياني

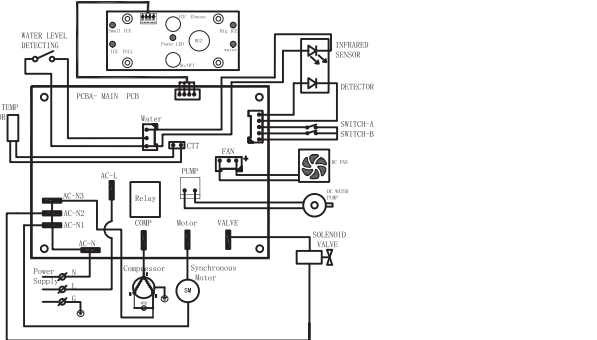

تعليمات وخطوات لوحة التحكم

- إشارة ملء الثلج
- إشارة التشغيل
- إشارة نقص الماء
- إشارة تشغيل إرفاق
- إشارة الثلج الصغير
- إشارة الثلج الكبير
- إشارة الثلج الكبير

تنبيه:

- بعد استلام الجهاز، يرجى تركه لمدة تزيد عن ٢٤ ساعة ثم تشغيل الجهاز.
- عند إضافة الماء إلى خزان الماء، يرجى التأكد من توصيل الغطاء السيليكوني في أسفل الجهاز.
- لا تستخدم ماء يحتوي على شوائب أو ذرات صلبة ويفضل استخدام ماء نقي.

افتح الصبوة:

- قم بإزالة جميع العلوات الخارجية والداخلية وتحقق مما إذا كانت جميع الأجزاء موجودة.
- قم بإخراج سلة تخزين الثلج وغسلها بماء نظيف في درجة حرارة الغرفة، ثم استخدم كمية من الماء النظيف في غسل خزان الماء.
- قم بتسلي أعمدة التبخير بالماء النظيف أو بالكلور.
- يرجى وضع صانع الثلج بعيداً عن أشعة الشمس المباشرة والحرارة والإشعاع. ضع صانع الثلج أفقياً وتأكد من وجود فتحة بحدام ٥ سم بين الجوانب والخلف.
- يجب وضع صانع الثلج في مقبس مناسب لتوصيل الكهرباء.

تشغيل صانع الثلج

تنبيه

استخدام سلك تأريض غير صحيح قد يتسبب في خطر الصعق الكهربائي.

- لا تقم بتوصيل سلك الكهرباء بالمقبس بيدك الرطبة، قد يحدث صعق كهربائي.
- لاسلامتك يجب أن يستخدم صانع الثلج مصدر طاقة موصل مازفي موقوف به.
- يحتاج الجهاز إلى مصدر طاقة قياسي، بقيمة ٢٢٠-٢٤٠ فولت/ ٥٠ هرتز / ١٠ أمبير مع تأريض.

تنظيف صانع الثلج

- قبل استخدام صانع الثلج، ينصح بشدة بتنظيف الجهاز بشكل كامل.
- قم بإخراج سلة الثلج.

- قم بفتح الغطاء السيليكوني في أسفل جسم الجهاز وصرف الماء الموجود داخل خزان الماء.
- بعد تخفيف الفماش الناعم بمطف محاي، قم بتنظيف خزان الماء والجزء الخارجي من الجهاز.
- اشطف الداخل بالماء النظيف.
- قم بتركيب الغطاء السيليكوني في أسفل الجهاز وتأكد من تركيبه بشكل جيد.
- لا تستخدم المواد الكيميائية مثل الكلور.
- لا تستخدم كرة فولاذية أو فرشاة صلبة وأدوات أخرى لتنظيف سطح المنتج.
- لا تعرض كذا الجهاز للمنتج وملحقات التغليف الأشعة الشمس.
- لا تعرض خزان الماء لدرجة معينة أو فية رأساً على عقب، والا قد لا يعمل نظام التبريد بشكل صحيح.
- إذا لم يتم استخدام الجهاز لفترة طويلة، يجب صرف الماء الموجود داخل خزان الماء وتنظيفه.

استخدام صانع الثلج [داخل المنزل]

- افتح الغطاء الأمامي، وقم بإخراج سلة الثلج وأصف بعض الماء إلى خزان الماء. (أنوصي بأن يكون مستوى الماء أدنى من المستوى القصوى للماء)
- قم سلة الثلج مرة أخرى وتأكد من تثبيتها بشكل جيد. إذا لم يكن الأمر كذلك، يرجى الضغط بلطف على قاع السلة لتثبيتها في مكانها.
- أضبط على زر "1" على لوحة التحكم، وأخرج حجم مكعب الثلج الذي تحتاجه. ثم اضغط على زر "power" لبدء عملية صنع الثلج.
- يستغرق الدورة الأولى لإنتاج الثلج حوالي ٩ دقائق. وذلك يعتمد على درجة حرارة الغرفة وحجم مكعب الثلج يعتمد أيضاً على درجة حرارة الماء ودرجة الحرارة المحيطة.
- بعد بدء صنع الثلج، يجب التحقق من مستوى الماء في خزان الماء بشكل متكرر. إذا كان مستوى الماء منخفضاً جداً فإن المصخة لن تتمكن من ضخ الماء، وسيتوقف صانع الثلج تلقائياً وستظل إشارة النقص مضاءة بشكل ثابت للإشارة إلى نقص الماء. في الوقت نفسه سيبدأ المنبه في الصدم، وفي هذه اللحظة يجب ملء خزان الماء بكمية تكون دون المستوى القصوى للماء ثم الضغط على زر "on/off" لبدء عملية صنع الثلج مرة أخرى.
- إذا كانت سلة الثلج ممتلئة بالثلج، فيستوقف صانع الثلج تلقائياً عن صنع الثلج وستظل إشارة الممتلاء مضاءة بشكل ثابت. في الوقت نفسه سيبدأ المنبه في الصدم، وعندما يكون موضع الثلج أقل من موضع الكشف بالأشعة تحت الحمراء، سيبدأ الجهاز في العمل مرة أخرى.
- يقاها/إلغاء صنع الثلج لإيقاف أو إلغاء صنع الثلج، اضغط على زر "on/off" لإيقاف صنع الثلج. وسيكون الجهاز في وضع الاستعداد.
- يوصي بتغيير مرة مرة واحدة كل ٢٤ ساعة للحفاظ على نظافة الماء.
- إذا لم يتم استخدام صانع الثلج لفترة طويلة، يُرجى صرف الماء الموجود داخل خزان الماء وتنظيفه.

- يوصي بتغيير مرة مرة واحدة كل ٢٤ ساعة للحفاظ على نظافة الماء.
- إذا لم يتم استخدام صانع الثلج لفترة طويلة، يُرجى صرف الماء الموجود داخل خزان الماء وتنظيفه. وفي الوقت نفسه، يُرجى قطع التيار الكهربائي وسحب القابس من المقبس.

- لضمان جودة الثلج، يرجى استبدال الماء بشكل متكرر. بعد تخفيف المنظف المحايد بالماء، استخدم قطعة قماش ناعمة أو إسفنجاً لتنظيف الجزء الداخلي والخارجي للمنتج.
- إذا لم تستخدمه لفترة طويلة، يرجى سحب القابس من المقبس بعد قطع الطاقة عن الجهاز وتصريف الماء المتبقي من فتحة التصريف، والحفاظ على الجهاز في حالة جافة تماماً.

الأوصاف غير المعيبة

السبب	الموقف
قم بتفريغ الهواء من أنبوب شفط الماء. لمنع من إنتاج ماء بدون وجود ماء.	عند بدء تشغيل صانع الثلج لأول مرة، تقوم المصخة بالضخ لمدة ٥ ثوانٍ، ثم تتوقف لمدة ٥ ثوانٍ، ومن ثم تبدأ مرة أخرى لمدة ٥ ثواني وتتوقف مرة أخرى لمدة ٥ ثوانٍ. ثم تستمر في سحب الماء بشكل مستمر لمدة ٣ دقائق.
هذا لاكتشف عما إذا كان صندوق صنع الثلج أفتقلاً.	بعد توصيل الجهاز بمصدر الطاقة وتشغيله، يبدأ صانع الثلج في عملية صنع الثلج.
هذا لإزالة وهم الثلج الممتلئ الناتج عن خطأ في تقدير الأشعة تحت الحمراء.	أثناء عملية صنع الثلج، عندما يتم حجب الضوء تحت الحمراء، يقوم الجهاز بإنتاج الثلج بشكل طبيعي. بعد دورة واحدة من صنع الثلج، يظل الضوء تحت الحمراء محجوباً، ثم يظهر على الشاشة "ماء (ممتلئ)".

تحليل ومعالجة الفشل

الحلول المقترحة	الأسباب المحتملة	عطل
لا يعمل مؤشر الطاقة.	لم يتم توصيل قابس الطاقة بشكل صحيح أو لا يوجد بيار كهربائي في المقبس.	قم بتوصيل قابس الطاقة بشكل صحيح في مكانها، وتأكد من أنه متصل بشكل منفصل.
الجهاز يصدر ضوضاء غير طبيعية.	١. الجهاز غير مستقر. ٢. الجهد الكهربائي منخفض جداً. ٣. وجود جسم غريب في مروحة الجهاز.	١. يرجى تثبيت المنتج في موضع مستو. ٢. قم بقطع التيار الكهربائي وتأكد مما إذا كان هناك مشكلة في الجهد. ٣. قم بقطع التيار الكهربائي أولاً، ثم تحقق مما إذا كان هناك جسم غريب في المروحة.
مؤشر الثلج الممتلئ يومض.	لوحة المعلقة الخاطئة بالثلج مصقفة.	١. اضغط على زر "تشغيل/إيقاف" المنتج. ٢. يرجى التحقق من استخدام المنتج والاتصال بالمورد واضحه عن طريق مركز الصيانة المعتمد. هذه هي الترجمة لجمعية الحالات المذكورة.

وظيفة التنظيف الذاتي:

- قم بتوصيل الجهاز بالكهرباء. عندما يومض مؤشر الطاقة، اضغط باستمرار على زر الطاقة لمدة ٣ ثوانٍ. سيبدأ التنظيف الذاتي. سيتم تشغيل الماء داخل الجهاز لعدة ثوانٍ لمدة ١٠ دقائق. يجب صرف ماء خزان الماء وإعادة ملئه بعد عملية التنظيف الذاتي. ثم يمكن بدء عملية صنع الثلج.
- احتياطات السلامة:
- يرجى قراءة تعليمات السلامة بعناية قبل الاستخدام واستخدام الجهاز بالشكل الصحيح.
- تغير احتياطات السلامة المذكورة هنا مسائل هامة تتعلق بالسلامة، يرجى اتباعها.
- تظهر الرموز والمعاني على النحو التالي.

تعليمات الإشارات

العلامة	معنى الإشارة
	تحذير: هذا يعني أنه إذا لم تعمل بشكل صحيح، فقد يتسبب ذلك الموت أو الإصابات الجسدية الخطيرة.
	انتباه: هذا يعني أنه إذا لم تعمل بشكل صحيح، فقد يتسبب ذلك الوفاة أو الإصابات الشخصية الصارة أو فقدان العناصر.

الإشارات

العلامة	معنى الإشارة
	هذا يعني منع (أسلوات محظور). يتم توضيح المحتوى الخاص في الإشارة أو الرموز أو التعليمات والبيانات الموجودة بالقرب من الإشارة.
	هذا يعني تنفيذ إجراءات (يجب تنفيذها). تُعرض الإجراءات المحددة في الإشارة أو الرموز أو التعليمات والبيانات الموجودة بالقرب من الإشارة.
	هذا يعني أمورا تحتاج إلى الانتباه إليها. تُعرض التفاصيل المحددة في الإشارة أو الرموز أو التعليمات والبيانات الموجودة بالقرب من الإشارة.

تحذير

العلامة	معنى الإشارة
	لا تفك أو تصلح أو تعطل الجهاز. فقد يتسبب في حدوث حريق أو صدمة كهربائية أو حوادث. لإصلاح، يرجى الاتصال بالمورد الخاص بك.

العلامة	معنى الإشارة
	٢ قبل القيام بالصيانة اليومية، يرجى سحب القابس من المقبس وقطع التيار الكهربائي أولاً. ولا قد يتسبب ذلك في حدوث صدمة كهربائية أو اختلال في الإشارة الكهربائية.
	٣ يرجى أخذ الجزء المعزول من قابس الطاقة في الجزء الأمامي وسحب القابس. لا سحب السلك، والا قد يتم كسر سلك الطاقة أو استئالة.
	٤ يرجى تنظيف التيار المتراكم على قابس الطاقة بشكل متكرر. والا قد يحدث حريق بسبب سوء العزل. يرجى سحب قابس الطاقة وتنظيف قطعة فماش جافة.
	٥ لا تستخدم البدين المبلتين لتوصيل أو فصل مصدر الطاقة، والا قد يتسبب ذلك في حدوث صدمة كهربائية أو حروق أو إصابات أخرى.
	٦ إذا لم يتم استخدامه لفترة طويلة، يرجى سحب قابس الطاقة بعد قطع التيار الكهربائي وتصريف الماء المتبقي من مخرج التصريف وتخزينه في حالة جافة بالكامل.
	٧ لا تعمر الجهاز في الماء أو استخدمه في الحمام أو في أماكن يمكن أن يتعرض فيها الجهاز للرش بالماء، والا قد يتسبب ذلك تماس كهربائي أو صدمة كهربائية.
	٨ عندما يبدأ أو يتوقف صانع الثلج، ستحدث صوت "كليك" ناتج عن بدء عمل المفتاح الكهربائي والحاوي الحراري وغيرها من الأجزاء الكهربائية. وعند تدفق وسيط التبريد في التركيب، ستسمع صوتاً مماثلاً للتدفق. أثناء عملية صنع الثلج، عندما يتم إنتاج الثلج من الجهاز، ستسمع صوتاً "كليك". وهذه كلها ظواهر طبيعية وليست خطراً في الجهاز.
	٩ في حالة حدوث أي طارئ أو عطل، يُرجى التوقف عن استخدام الجهاز فوراً، والا قد يتسبب في إصابات أو أضرار. و حدوث حريق أو صدمة كهربائية. يرجى قطع إمداد الطاقة وسحب قابس الكهرباء من المقبس. ومن ثم الاتصال مع المورد واتوجه لصيانة الجهة المعتمدة لإصلاح الجهاز، والا قد يتسبب في إصابات أو أضرار. و حدوث حريق أو صدمة كهربائية. يرجى قطع إمداد الطاقة للجهاز فوراً وسحب سلك الكهرباء من المقبس. ثم التواصل مع المورد وخدمة العملاء لإصلاح الجهاز عن طريق مزود خدمة الحياة.
	١٠ عند وضع الجهاز، يُرجى ترك مساحة كافية له، والا قد يؤدي ذلك إلى تسرب وبقع، وسيط التبريد. مما قد يؤدي إلى حدوث حريق أو حوادث خطيرة.
	١١ لا تستخدم الجهاز في وضع غير ثابت، والا قد تحدث إصابات أو أضرار. يُرجى الانتباه أو التحذير. عند وضع الجهاز، لا تضعه خارج السطح أو القاعدة المخصصة.

المعايير الفنية

اسم المنتج:	آلة صنع الثلج المنزلية
طرز المنتج:	طراز BK-PD-LSICMV٢
الجهد المقدر:	الجهد المقدر: ٢٢٠-٢٤٠V
التردد المقدر:	التردد المقدر: ٥٠Hz
سعة تخزين الماء:	سعة تخزين الماء حوالي ٢.٢ لتر
سعة تخزين الثلج:	سعة تخزين الثلج: ٠.٧ كجم
وقت صنع الثلج:	وقت صنع الثلج: ٨ دقائق
قدرة صنع الثلج في ٢٤ ساعة:	قدرة صنع الثلج في ٢٤ ساعة: ١.٢ كجم
نوع المناخ:	نوع المناخ: SN N ST
التيار المقدر:	التيار المقدر: ٠.٧ أمبير
المبرد/غرام:	المبرد/غرام: ٢٧٦.٠٠ جرام
نوع العزل:	نوع العزل: EPS
حجم المنتج بالمليمتري:	حجم المنتج بالمليمتري: ٣٦٠.٤٠×٢٢٠×٣٦٠ مم
حجم العبوة بالمليمتري:	حجم العبوة بالمليمتري: ٥٧٥×٨٥٠×٤١٢ مم
الوزن الصافي/الوزن الإجمالي:	الوزن الصافي/الوزن الإجمالي: ٩.٥/٩.٥ كجم

١. قد تتغير مواصفات المنتج ومظهره نظراً لتحسين جودته.

٢. الفتح الجيار بخلاف الجهاز الرئيسي في مواد استهلاكية. عندما تفقد أو تحتاج إلى استبدالها، يرجى التواصل مع المورد الخاص بك.

٣. البيانات المذكورة أعلاه للإشارة عامة فقط. قد تختلف بسبب الفصول القصيرة والسلسلة والظروف وشروط درجة الحرارة المستخدمة.