porodo LIFESTYLE

Model : PD-LSNMR-WH

NECK & WAIST MASSAGER

with Hot Compress

Product configuration

Massager, charging cable, remote control , user manual

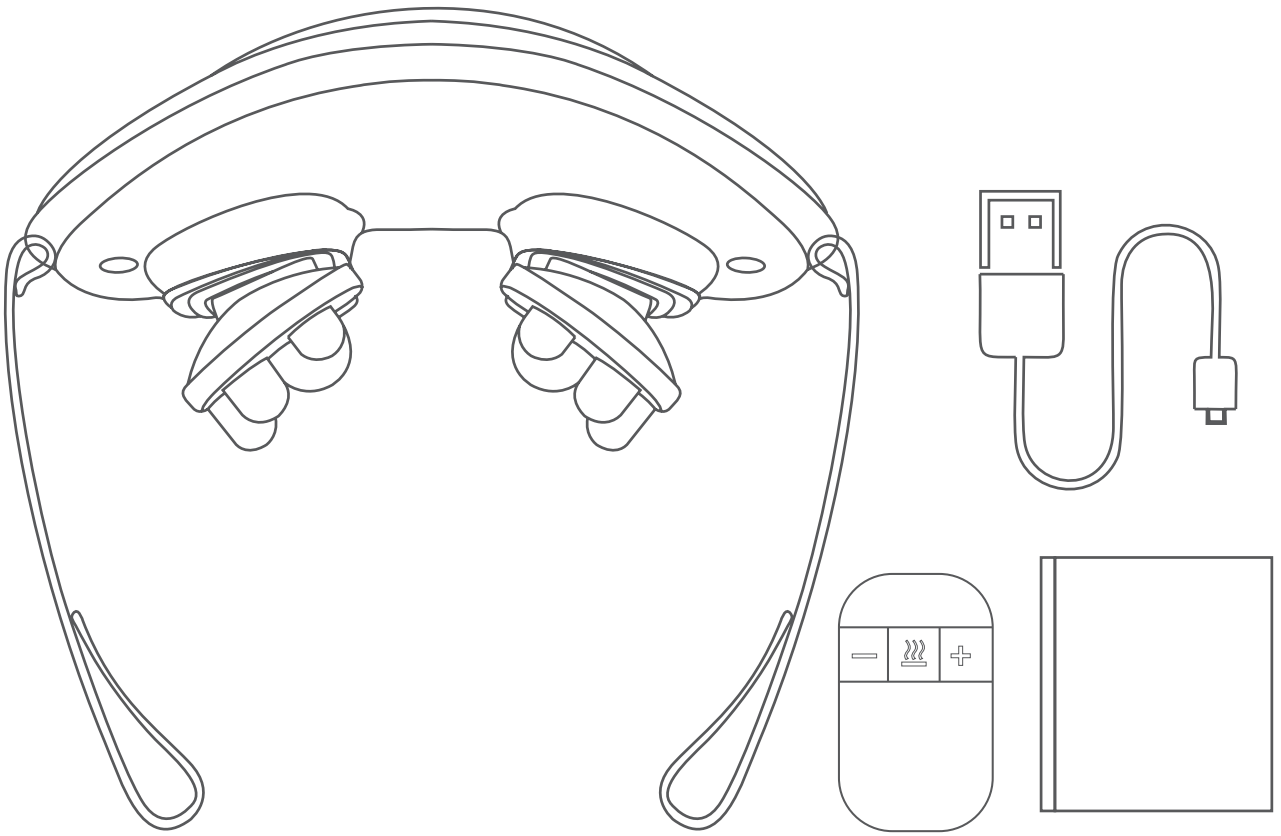

Product information

Model: FM-N1	Product Name: Neck Massager	Input current:5V 2A
Interface type: Type-C	Key setting: Three-level mode	Capacity: 2300mAh
Accessories: remote control/charging cable	Size: 191.2mm*79mm*104.4mm	

Storage conditions: ventilated and dry/stored at room temperature

Operation and Features

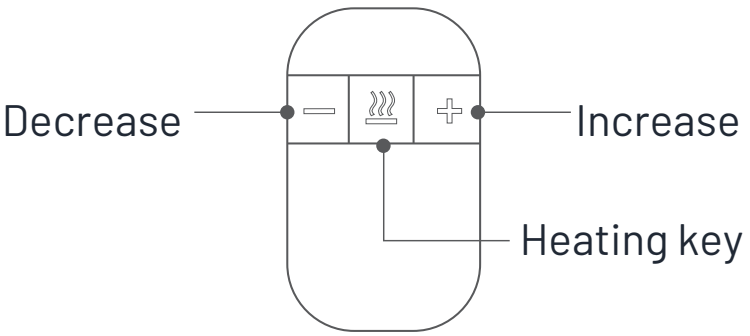

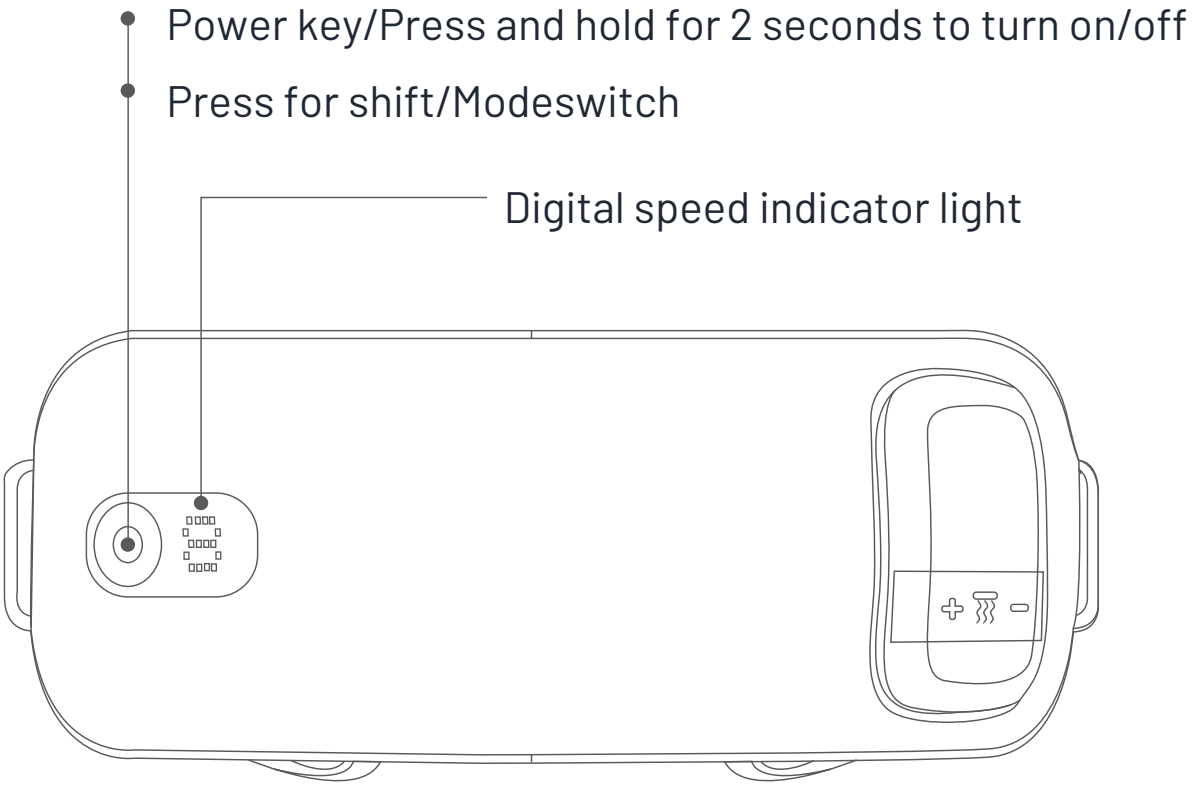

Three modes

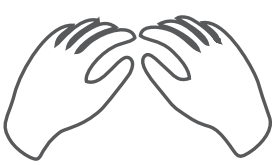

Innovative kneading massage skill

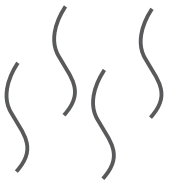

Comfortable hot compress

Light and portable

⚠ Cautions

In order to ensure your correct and safe use of this product, please read it carefully before usage.For incorrect use or failure to comply with the relevant instructions of this product,We will not be responsible for the consequences caused by it.

1. Do not use this product while driving;
2. When using, please remove accessories or items that may affect the massage;
3. Please keep this product away from fire and corrosive environment;
4. Do not use it in the body parts that performed manual surgery;
5. Do not use it in the body pars that have skin injury, swelling inflammation, congestion and other discomfort symptoms;
6. Do not use for patients with heart disease or history, acute disease, skin disease, malignant tumor or abnormal body;
7. Do not use in patients with blood diseases such as bleeding, osteoporosis, soft tissue diseases, and stroke.
8. Do not use it for people with slow movement, physical and mental dysfunction or mental disability. If necessary, please follow the doctor's advice;
9. Please stop using if you feel uncomfortable during usage;
10. Pregnant women should not use massagers;
11. Children under 6 years of age are not allowed to use, and children between 6 and 12 years of age can use it under the guidance and care of a parent or a person capable of supervision.
12. This product is a household electronic health care product, not as a medical device, not suitable for diagnosis, therapeutic and other commercial uses;
13. Please use the oringinal charger to charge the product, and pay attention to the safety of electricity;
14. If abnormal phenomenon occurs during usage, please cut off the power im mediately, do not disassemble and repair yourself.

Product use manual

1. Touch the operation key, press and hold the power key for 2 seconds to turn on/off.
2. 3 massage modes: pressure relief mode→neck relaxing mode→acupoin kneading mode, plus an infrared hot compress mode . Press the power key, each mode will be switched sequentially, the default mode: pressure relief mode.
3. The default shut down time is 10 minutes when power on.
4. Heating function
5. With USB charging port . When charging, the power light is full of green. The massager does not work while charging.
6. Remote control: pressure relief mode→neck relaxing mode→ acupointkneading mode or pressure relief mode→acupoint kneading mode → neck relaxing mode . Two modes cycle, "-" and "+" enter the corresponding mode.
7. Massage heads: Silicone material, soft and hard, imitating manual massage.
8. Power indicator
9. Protection function: switch forward and reverse when the massager is stuck; When the neck massager is working, connect the charger, turn off the output, enter the charging mode, and massager in Dormancy after remove the charger when the voltage is lower than 3.5V, the massager needs to be charged and activated afterbeing shut down 4 times (the red light flashes 3 times when starting):

Turn off	10%	25	50% 75%	
LED off	Red light flashing	Red light flashing	Red and green lights flashing	Green light on

Trouble shooting

If a fault occurs during operation, perform the following checks:If the fault cannot be solved or the product is still not working properly, please cut off the power supply. It should be repaired by professional technicians, and do not disassemble the product!

Basic failures	Possible causes	Basic exclusion method
Switch malfunction	Weather the battery is low?	If yes, please charge in time
Weak massage	Weather the battery is low?	If yes, please charge in time

⚠ Safety tips

1. Do not charge the product under fire or extremely hot conditions! Do not use or store products near heat sources such as fire or heaters! If the product battery leaks or gives off an odor, move it away from the open flame immediately!
2. Please use an oringinal charger!
3. Do not put the product into the fire or heat the product!
4. It is forbidden to pierce the product shell with nails or other sharp objects, and it is forbidden to hammer or pedal the product!
5. Do not hit, throw or make the product subject to mechanical vibration!
6. Do not break down the product in any way!
7. Do not put the product in the microwave oven or pressure vessel!
8. Do not use the product if it gives off odor, heat, deformation, discoloration or any other abnormal phenomenon: If the product is being used or charged, take it out immediately and stop using it!