

120 mm

porodo
LIFESTYLE


User Manual



Portable Handheld Printer

Instant Colour Printing

Model: PD-LSMIPRT-WH

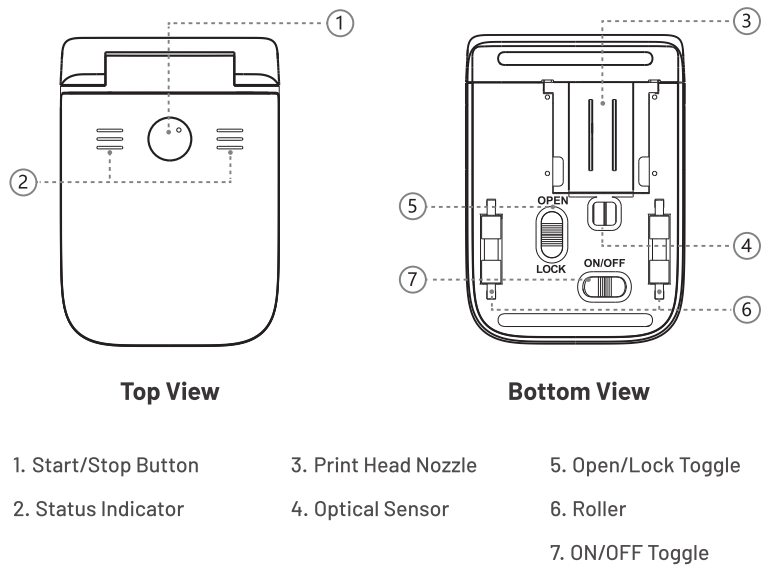

- | | | |
|----------------------|----------------------|---------------------|
| 1. Start/Stop Button | 3. Print Head Nozzle | 5. Open/Lock Toggle |
| 2. Status Indicator | 4. Optical Sensor | 6. Roller |
| | | 7. ON/OFF Toggle |

What's InThe Box

- Printer
- Base Dock
- Clean Brush
- Two Rulers
- Type-C Charging Cable
- User Manual
- Standard Ink Cartridge
- Advanced Printing Holder

Basic Operation

Install cartridge

1. Remove the protective case and protective film on the ink cartridge;
2. Remove the printer base and pull the toggle switch to 'OPEN', then open the transparent cover;
3. Put the cartridge into the printer's ink tank, making sure that it's fully secured. Close the transparent cover and pull the toggle switch to LOCK

Notes:

- To open and lock the transparent cover, keep the cover in the closed position and then toggle the switch;
- If the ink cartridge is not used for a long time, it is recommended to put it back in the cartridge protective case.

Open APP

1. Turn on the power switch on the bottom of the printer and wait for 5 seconds to get ready to go with a beep. Connect through WiFi.
2. Search for WiFi with your device (such as a mobile phone). Find 'Por-Printer' and connect. (Default password: 12345678)
3. Use the camera app to scan the QR code on the inner side of the base or enter the address 192.168.44.1 or [fd44::1] in your browser to open the app. Connect through USB;
4. Connect the USB cable to your device (such as a laptop).
5. For MacOS and Linux, no driver required.

For Windows, should install driver first: win_driver

6. Enter the address 192.168.88.1 or [fd88::1] in your browser to open the app.

Download & Install Driver



Print Operation

1. Turn on the power switch on the bottom of the printer and wait for 5 seconds to get ready to go with a beep.
2. Place the printer on the test paper and press the button for 1 second to automatically clean the nozzle. It may take several times to ensure that the entire 3 colored lines are ejected.
3. Place the printer on the surface of the object to be printed.
4. Click the button, the green indicator light is on, and it's ready to print.
5. Slide the printer to the direction you want to complete the print operation. The green light goes off when it's finished.

Notes:

- If the nozzle is dirty, please push out the brush in the base to clean the nozzle;
- lithe nozzle is particularly dry, please pour a little water on the table, remove the cartridge, and soak the nozzle in water for about 1 minute.

App Operation

1. Click'New' to create a new file.
2. Click Add image' or 'Add text' to add content.
3. Click on the image or text to move, rotate and zoom. (Click the selected text again to re-edit the content.)
4. After the material is added, click'Print Preview' to enter the Crop mode.
5. Click the default crop box shown in the edit area, adjust the crop box to fit the desired pattern area. 6. Click'Print' to send the pattern to the printer.

Notes:

- If the nozzle is dirty, please push out the brush in the base to clean the nozzle;
- lithe nozzle is particularly dry, please pour a little water on the table, remove the cartridge, and soak the nozzle in water for about 1 minute.

Button Operation and Status Indication

- 5 seconds after power-on, it enters the ready state, followed by one beep, and the white lights in the middle and both sides are on;
- In the ready state, click the button to enter the print state. The white lights on both sides turn to green. Sliding the printer to complete the printing (The continuous prompt tone will be sounded if the sliding is too fast). It will automatically return to the ready state when the printing is completed;
- In the ready state, press and hold the button to enter the cleaning state, the white lights on both sides turn to green. Keep the printer still, wait for a while and it will automatically return to the ready state;
- In the print state, click the button to return to the ready state. If it is in the middle of multiple-line printing, the next line will be printed when you re-press the button again (return to first line if press and hold the button instead);
- Press and hold the button, then turn on the power switch to enter the programming mode;
- After turning on the power switch, press and hold the button within 5 seconds until the white lights flash on both sides, the WiFi name and password will be restored to the default setting (Default password: 12345678);
- When the battery is low, the middle white light flashes;
- The charging indicator is next to the USB port (Type-C). Charging: Yellow I Fully Charged: Green

Advanced Operation

Multiple-line Printing

In the Crop mode, you can add multiple crop boxes for multiple-line print. (Each box for one line printing.) When you are done with the pattern editing and cropping, press the button for the first line printing. Move the printer to the next line and press the button again for second-line printing. Follow the same manner to finish the rest lines.

Multiple-line Aligning

When you are done with the first line cropping, you can use the 'Duplicate downward' option to duplicate the first box, making sure the multiple-line printing is aligned.

Ultra-wide Pattern Printing

For ultra-wide pattern printing, errors may happen and the conversion process is longer than the regular pattern printing. You can edit the very first crop box on the left and use the Duplicate right option to duplicate the first box.

Software Offline Operation

1. Go to the app setting page (check the sidebar on the home page).
2. Download the https certificate and install it.
3. Click the https link at the bottom of the app setting page. 4. Use browser option (Sharefunction): Save page to desktop/home page.

Notes:

- Software features need to be used online first before they can be used offline.

Install Certificate in iOS

1. Click the certificate link on the APP Settings page to download the certificate.
2. Go to Settings > Profile Downloaded > Install the certificate.
3. Go to Settings > General > About > Certificate Trust Settings. Under 'Enable full trust for root certificates: turn on trust for the downloaded certificate.

Install Certificate in Android

1. Click the certificate link on the APP Settings page to download the certificate.
2. Go to Settings > Lock screen & security > Install from device memory/SD card > Select the certificate.

Designed and manufactured by Tetragonix Inc.
All rights reserved 2023.

For more information, please contact our support team:
support@porodo.net

www.porodo.net

porodo

inporodo

CE RoHS FCC Made in China

الملاحظات:

- يجب استخدام ميزات البرنامج عبر الإنترنت أولاً قبل أن يمكن استخدامها على الإنترنت.

iOS

1. انقر على رابط الشهادة في صفحة إعدادات التطبيق لتنزيل الشهادة.

2. انتقل إلى الإعدادات، ثم تنزيل الملف الشخصي، تثبيت الشهادة.

3. انتقل إلى الإعدادات > عام > حول > شهادة إعدادات الثقة، صمى > تمكين الثقة الكاملة لشهادات الحذر، فقل الثقة للشهادة التي تم تنزيلها.

تثبيت الشهادة في Android

1. انقر على رابط الشهادة في صفحة إعدادات التطبيق لتنزيل الشهادة.

2. انتقل إلى الإعدادات، فقل الشهادة والأمان > التثبيت من ذاكرة الجهاز / بطاقة SD، حدد الشهادة.

تشغيل الزر وبيان الحالة

- بعد ه تولى من التشغيل، تدخل حالة الاستعداد. تبها صفراء واحدة، والأضواء البيضاء في المنتصف والجانبين مضائيان.:

- في حالة الاستعداد، انقر فوق الزر للدخول إلى حالة الطباعة، تتحول الأضواء البيضاء على كلا الجانبين إلى اللون الأخضر. تحريك الطباعة لإكمال الطباعة (سيتم إصدار نغمة المطالبة المستمرة إذا كان الزر لا يزال سريعاً خلال سبعون ثلثاً إلى حالة الاستعداد عند اكتمال الطباعة.:

- في حالة الاستعداد، اضغط مع الاستمرار على الزر للدخول إلى حالة التنظيف، تتحول الأضواء البيضاء على كلا الجانبين إلى اللون الأخضر احتفظ بالطباعة ثابتة، انتظر لفترة وستعود تلقائياً إلى حالة الاستعداد:

- في حالة الطباعة، انقر فوق الزر للعودة إلى حالة الاستعداد. إذا كان في منتصف الطباعة متعددة الأسطر، فسيتم طباعة السطر التالي عند إعادة الضغط على الزر مرة أخرى الرجوع إلى السطر الأول إذا قمت بالضغط مع الاستمرار على الزر بدلاً من ذلك):

- اضغط مع الاستمرار على الزر. ثم قم بتشغيل مفتاح الطاقة للدخول إلى وضع البرمجة:

- بعد تشغيل مفتاح الطاقة، اضغط مع الاستمرار على الزر خلال ه تولى حتى تضيء الأضواء البيضاء على كلا الجانبين، وسيتم استعادة اسم wifi وكلمة المرور إلى الإعداد الافتراضي (كلمة المرور الافتراضية: 12345678).

- عندما تكون البطارية منخفضة، يتحول الضوء الأبيض المتوسط إلى رماد:

- يكون مؤشر الشحن بجوار منفذ يو إس بي (اليمين-يسار) أصفر أنا مشحونة بالكامل. الأخضر

عملية متقدمة

طباعة متعددة الخطوط

في وضع crop، يمكنك إضافة مربعاً في متعددة للطباعة متعددة الأسطر (كل مربع طباعة سطر واحد). عند الانتهاء من تحرير النمط والخص، اضغط على الزر لطباعة السطر الأول، نقل الطباعة إلى السطر التالي واضغط على الزر مرة أخرى لطباعة السطر التالي، اتبع نفس الطريقة لربط بقية الخطوط.

محاذاة متعددة الأسطر

عند الانتهاء من اقتصاص السطر الأول، يمكنك استخدام خيار "Duplicate downward" لتكرار المربع الأول، مع التأكد من محاذاة الطباعة متعددة الأسطر.

طباعة نمط واسع للغاية

لطباعة النمط العريضة جداً، قد تحتاج أحياناً وتكون عملية التحويل أطول من طباعة النمط العادية. يمكنك تحرير مربع الاقتصاص الأول على اليسار واستخدام خيار "تكرار اليمين" لتكرار المربع الأول.

تشغيل البرنامج

1. انتقل إلى صفحة إعداد التطبيق، تحقق من الشريط الجانبي في الصفحة الرئيسية).

3. انقر على رابط [help](#) أسفل صفحة إعدادات التطبيق. 4. استخدم خيار المتصفح (مشاركة الوظيفة)، حفظ الصفحة على سطح المكتب/الصفحة الرئيسية.

افتح التطبيق

1. قم بتشغيل مفتاح الطاقة الموجود في الجزء السفلي من الطباعة وانتظر لمدة ه تولى للاستعداد لإصدار صوت تنبيه، اتصل عبر WiFi

2. البحث عن WiFi، يهزرك أمثل الهدف المحمول. البحث عن "Porodo-MBnash-1" وقم بالاتصال بكلمة المرور الافتراضية: 12345678

3. استخدم تطبيق الكاميرا لمس رمز الاستجابة السريعة على الجانب الداخلي للقاعدة أو أدخل العنوان 192.168.44.1 أو [fd44::1] في متصفحك لفتح التطبيق. الاتصال عبر يو إس بي:

4. قم بتوصيل كبل يو إس بي بجهازك أمثل كمبيوتر محمول.

5. بالنسبة لنظامي MacOS و Linux، لا يلزم وجود محرك أقراص. لنظام التشغيل

Windows، يجب تثبيت برنامج التشغيل أو **win_driver**

1. أدخل العنوان 192.168.88.1 أو [fd88::1] في متصفحك لفتح التطبيق.



Download & Install Driver

عملية الطباعة

- 1- قم بتشغيل مفتاح الطاقة الموجود في الجزء السفلي من الطباعة وانتظر لمدة ه تولى للاستعداد لإصدار صفير.
2. ضع الطباعة على ورقة الاختبار واضغط على الزر لمدة ثابئة واحدة لتنظيف الفوهة تلقائياً. قد يستغرق الأمر عدة مرات للتأكد من خراج الخطوط الملونة الثلاثة بالكامل.
3. ضع الطباعة على سطح الخاطئ المراد طباعته.

4. انقر فوق الزر، وضوء المؤشر الضوئي الأخضر، ويكون جاهزاً للطباعة.

5. حرك الطباعة إلى الاتجاه الذي تريده لإكمال عملية الطباعة. ينطفئ الضوء الأخضر عندما ينتهي.

ملاحظات:


- إذا كانت الفوهة متسبحة، يرجى دفع المرششة في القاعدة لتنظيف الفوهة.:
- الفوهة الخفيفة جافة بشكل خاص، يرجى صب القليل من الماء على المنضدة، وإزالة الخرطومشة. وقع الفوهة في الماء لمدة دقيقة واحدة تقريباً.

تشغيل التطبيق

1. انقر على "تحديد" لإنشاء ملف جديد.
2. انقر فوق إضافة صورة أو إضافة نص. لإضافة محتوى.
3. انقر على الصورة أو النص للتحريك والتدوير والتكبير. انقر فوق نص المحدد مرة أخرى لإعادة تحرير المحتوى.)
4. بعد إضافة المادة، انقر فوق "عملية قبل الطباعة" للدخول إلى وضع القص.
5. انقر فوق مربع الاقتصاص الافتراضي المعروف في منطقة التحرير، واضغط مربع الاقتصاص على منطقة النمط المطلوبة. 6. انقر فوق "طباعة" لإرسال النموذج إلى الطباعة.

ملاحظات:
• إذا كانت الفوهة متسبحة، يرجى دفع المرششة في القاعدة لتنظيف الفوهة.:

• الفوهة الخفيفة جافة بشكل خاص، يرجى صب القليل من الماء على المنضدة، وإزالة الخرطومشة. وقع الفوهة في الماء لمدة دقيقة واحدة تقريباً.

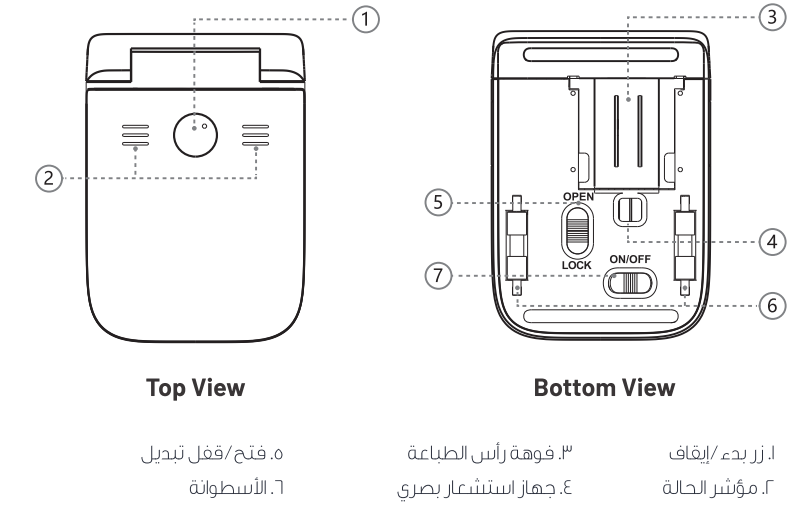

Top View

Bottom View

ه. فتح/فقل تدربل

الأسطوانة

ON/OFF. تدربل

ماذا في الصندوق

- خرطومشة حذر فيسيبة
- حامل طباعة متقدم
- اثنين من المساطر
- كابل شحن تليب-سي
- دليل الاستخدام

عملية أساسية

قم بت تركيب الخرطومشة

1. قم بإزالة الخافضة الوقائية واللوحة الواقية الموجودة على خرطومشة الحذر.:
2. قم بإزالة قاعدة القاعدة واسحب مفتاح التمدد إلى "فتح". ثم افتح الغطاء الشفاف.:
3. ضع الخرطومشة في خزان الحذر بالطباعة، وتأكد من تأمينها بالكامل. أغلق الغطاء الشفاف واسحب مفتاح التمدد لتفقل.

ملاحظات:

- لفتح الغطاء الشفاف، وقفله، احتفظ بالغطاء في وضع الإغلاق و ثم قم بتدليل المفتاح.:
- إذا لم يتم استخدام خرطومشة الحذر لفترة طويلة، فمن المستحسن إعادة تركيبها حالة الخرطومشة الوقية.

porodo
LIFESTYLE

دليل المستخدم



طابعة محمولة

طابعة فورية بالألوان

Model: PD-LSMIPRT-WH