

soundtec
BY PORODO



BONE CONDUCTION

WIRELESS HEADSET

USER MANUAL

MODEL: PD-STWLEP013-BK


ATTENTION

1. Do not put the headphones in the position of the airbag in the car, because when the airbag pops out, it may cause serious injury.
2. Do not let children play with this headphones. Small parts may cause choking hazard to children.
3. Hospitals, explosion sites or places with potential explosive environments may require users to turn off electronic devices and radio devices. Please pay attention to the instructions when entering certain areas.
4. Please turn off your earphones before boarding. You cannot use them on the plane.
5. In order to better protect your hearing, do not turn up the volume too loud.
6. Do not attempt to disassemble the headphones, as it does not contain any repair components.
7. If you do not plan to use the headphones for a long time, please store it in a dry place to avoid extreme temperatures and dust. You need to charge your heads at least once a month to extend battery life.
8. Avoid charging your headphones in places where the temperature is too high or too low.

INTRODUCTION

This product is an open sports headphones that uses Bluetooth communication technology to make voice calls. The product combines Bluetooth communication software inside the chip with peripheral electronic hardware, and is powered by external battery to make voice calls or play music with mobile phones, laptops and other communication products and devices with Bluetooth function. Reduce the adverse factors of radiation caused by mobile phone calls near the brain. To achieve health, environmental protection, scientific use of life concept.

FUNCTION

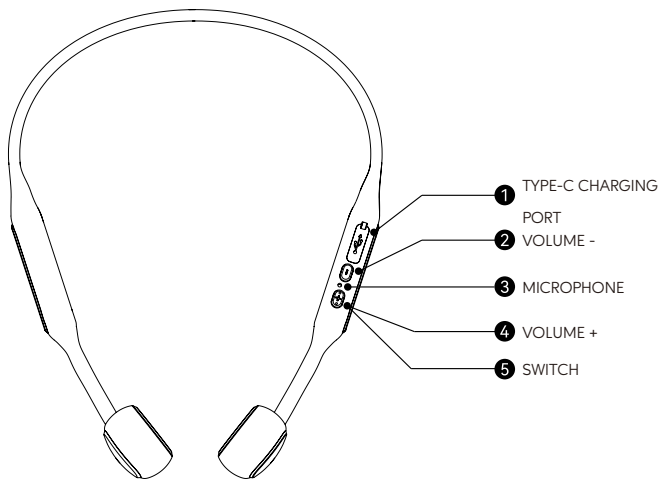

OPERATION INSTRUCTION

Turn on and off	Operation	LED Status
Turn on	Long press“+” for 3 seconds	After the blue light is on for 1s, the red and blue lights blink alternately
Turn off	Long press“+”for 5 seconds	After the red light is on for one second, the red and blue lights are off

Bluetooth	Operation	LED Status
Bluetooth pairing	After the device is turned on, the phone searches for Bluetooth and clicks “WOLO-BCE-ST” to pair.	Connection successful, all indicators off.
Disconnection	1.Disconnect the mobile phone manually; 2.If the distance exceeds 10 meters, the connection will be disconnected, and the connection will be automatically reconnected within 10 meters of the effective distance returned within 5 minutes.	After the connection is disconnected, the red and blue lights flash alternately
Remove pairs	Hold and press “+” for 10s in any state	After pairing is cleared, the red and blue lights flash alternately

Music mode	Status	Operation
Play	Connected	Click “+”
Pause	Music playing	Click “+”

Volume/Song control	Operation	Earphone status
Volume +	Double click “+”	At maximum volume there is a beep tone
Volume -	Double click “-”	At minimum volume there is a beep tone
Previous song	Triple click “-”	
Next song	Triple click “+”	

Voice Mode	Status	Operation
Answer the phone	Ring status	Click “+”
Hang up the phone	Call status	Long press “+” for 2s
Reject a call	Incoming call status	Long press “+” for 2s

Language switching	Operation	Earphone status
Chinese and English switching	In the unpaired state, press “-” for 5 seconds, to change Chinese/English	There are prompt switch success

Function	Operation	Instructions
1 Earphone 2 devices	Pairing state	This function is enabled by default. Only one device can be automatically connected back. The other device can be manually connected back

Night Run light operation	Operation	LED Status
Night Run light	After pairing the bluetooth, long press “-” for 2 seconds to turn on the night run LED light, and long press “-” for 2 seconds to turn off	When turned on, the blue light is on

Basic parameter

Product name: Bone Conduction

Product Model: PD-STWLEP013-BK

Product size: 128 x 100 x 42 mm

Product net weight: 25.5 g

Bluetooth version: Bluetooth 5.0

Frequency response: 20 Hz~20 KHz

Received spiritual teaching degree: -92 dBm

Operating frequency: 2.401GHZ ~ 2.482GHZ

Specification: 16MM、8Ω bone conduction horn

Call duration: 4 hours

Music playback time: 4 ~ 5H (80% volume)

Maximum power: 5mW

Built-in battery: no compound hammer battery

Interface Type: Type-C

Battery capacity: 160 mAh

Charging time: about 2H

Charging voltage: DC 5V

Enforce standards: GB8898-2011、GB13837-2012

Packing list: headphones body x1、 manual x1、 charging cable x1

Environmental protection life description

This electrical product is used under the conditions of use described in the manual, and the harmful substances or elements contained in the product will not be leaked and will not cause pollution to the environment or cause serious damage to people and property for 10 years.

For more information, please contact our support team:

support@porodo.net



www.porodo.net