




UV Sterilizer

Model: PD-FWCH002

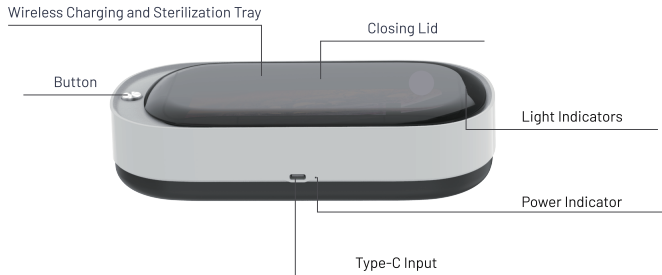

User Instructions

1. Connect Type-C cable into 18W power adapter and insert into UV box.
2. Open the lid and place mobile phone inside, phone will start charging. Blue indicator light turns and stays on.
3. Once lid has been closed press power button, Red light flashes once to commence 5-minute sterilization mode.
4. Alternately if power button pressed twice Red light will flash two times and stay on, indicating 10-minute sterilization process.
5. Press and hold power button to stop sterilization process.

Precautions

- Keep out of reach from children.
- Do not operate in a humid environment.
- Avoid dis-assembling the product, do not attempt to carry out any repairs.
- Do not allow contact with your skin or look into the UV-C lights.

Specifications

Package Dimensions	11 x 5.5 x 22 cm
Product Dimensions	17 x 2.3 x 9 cm
Product Weight	265g
Input Voltage/Output Power	DC5V/9V/12V (Use 18W Adapter)
Input Current	2A Max
Wireless Output	5W/7.5W/10W/15W
Total Output Power	18W Max
UV-C LED Wavelength	270-285nm
UV-A Wavelength	320-400nm