


# 3D Kneading Massage Pillow

SKU:PD-KMSPLW-GY



## Product Diagram

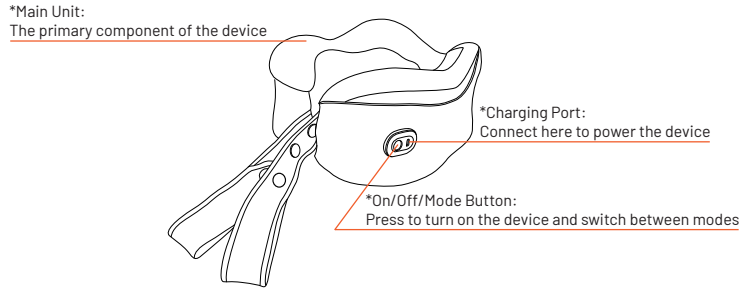

\*To charge, connect the device to your USB adapter.

## How to Remove the Cloth Cover



1. Unzip the device's cover. 2. Gently press to detach the cloth cover.

## Where You Can Use

This device is easy to operate and can be used on various parts of the body.



## Using Method

1. The device is equipped with a 15-minute timer and will automatically shut off after this duration.
2. To turn on the device, press and hold the power button for 3 seconds until the yellow indicator illuminates. For mode 1, press lightly and the red indicator will activate. Press again for mode 2, and so forth. To turn off the device, press and hold the power button for 3 seconds until the indicator light goes off, signaling that the device is off.

## Charging

1. The original packaging does not include an adapter. Use your own USB charger.
2. Thanks to its universal USB design, you can charge the device using a mobile phone adapter, car adapter, mobile power source, or laptop.

## Precautions

1. This massager is a health-oriented device, not a substitute for medical treatment. For health concerns, consult a physician.
2. Not recommended for pregnant or menstruating women, nor children under 6. Children between 6-12 should use under supervision.
3. Remove jewelry or similar items before use.
4. Individuals with heart conditions, acute illnesses, skin disorders, tumors, or other physical anomalies should refrain from using this device.
5. Avoid using on areas affected by surgery, injury, swelling, or inflammation.
6. Reiterated for emphasis, those with any serious health conditions mentioned in point 4 should not use the product.
7. Those with bleeding disorders, osteoporosis, soft tissue disorders, or stroke should avoid use.
8. Persons with heavy metal poisoning, mental illness, or cognitive impairment should use only if advised by a doctor.
9. Discontinue use if discomfort occurs and only use under appropriate supervision.
10. Avoid placing hands on the massage head to prevent injury.
11. Do not handle the power plug with wet hands to avoid electric shock.
12. Avoid using in high heat, near open flames, or in very humid conditions.
13. Do not operate continuously to prevent overheating.
14. Do not use during thunderstorms.
15. Do not attempt to disassemble or repair the device yourself to prevent hazards.
16. Keep the device dry; it's not waterproof.
17. Do not immerse the device in water.
18. Do not expose to direct sunlight.
19. This product is not for medical diagnosis, treatment, or any commercial use.

## Technical Parameters

<b>Product Name</b>	Kneading Massage Pillow
<b>Model</b>	PD-KMSPLW
<b>Size</b>	260 x 130 x 235mm
<b>Packaging</b>	275 x 130 x 120mm
<b>Composition</b>	80% Cotton, 20% Terylene
<b>Filling</b>	100% Memory Foam
<b>Voltage</b>	5V
<b>Power</b>	3.5W
<b>Operating Voltage</b>	3.7V
<b>Weight</b>	547g
<b>Certification</b>	Verified and Qualified
<b>Standards</b>	GB4706.1-2005/GB4706.10-2008
<b>Operational Temperature</b>	+5°C to +40°C

## Troubleshooting

Fault	Possible Causes	Solutions
Failure to start	Low battery	Charge accordingly
Unable to charge	Faulty power source	Replace adapter and cable
Weak massage power	Low battery	Ensure device is charged

## Protection

### Storage

If not used for over three months, inspect the device and recharge before use. Ensure the device does not lean against any surface and is stored in a well-ventilated area, shielded from direct sunlight and corrosive gases.

### Power Check

Prior to use, verify that the supply voltage matches the device's requirements. Do not operate if the voltage is not within the specified range.

### Maintenance

Implement damp-proofing, rodent protection, and pollution prevention measures. Power down the device before cleaning, and store in a secure location afterward. Do not place heavy objects on the device. Only qualified technicians should perform any repairs or disassembly.

### Disposal

Dispose of the device in accordance with local environmental regulations. Do not dispose of as unsorted municipal waste.

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:  
 info@porodo.net  
 Website: porodo.net  
 Service Support: support@porodo.net  
 Instagram: porodo

20. Be cautious if you are allergic to the device's materials.
21. Exercise care when feeling unwell.
22. Those with neck conditions or post-surgery should consult a healthcare professional before use.

## What's in the Package

Item	Quantity
Kneading Massage Pillow	1
User Manual	1
USB Charging Cord	1

## Tips

1. Limit continuous use of this product to 30 minutes to avoid discomfort.
2. Ensure the massage head is properly positioned on both sides of the neck to prevent pain.
3. If resistance is encountered and the massage head stalls for over 3 seconds, the device will shut down for safety; restart by holding the switch for 3 seconds.
4. For prolonged non-use, charge the device every 3 months to maintain battery health.