




PC HEALTH MONITOR

3.5" Display with Macro Software

Model-PDX537

Turing 3.5-inch secondary screen installation instructions

1. Connect the host via USB

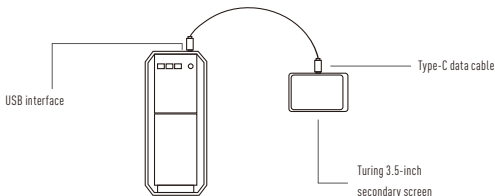


2. Use a patch cord to connect

Method 1

5pin adapter cable: If you purchased a 5pin adapter cable, please make sure that the black wire of the adapter cable is aligned with the empty pin of the motherboard's 9pin interface

Method 2

If you purchased a 9 Pin adapter cable, you can insert it into the interface

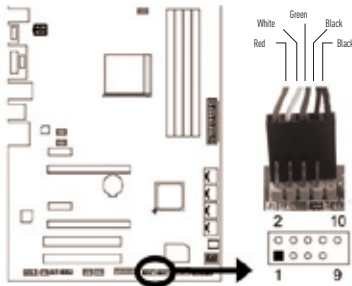

Turing 3.5-inch secondary screen instructions

Step 1. Download and run the software

1. Log in to Turing Smart Display's official website: www.turzx.com to download the 3.5-inch driver software (enter the official website and click "DOWNLOAD" above)
2. Unzip the downloaded package, enter the directory, right-click "usbmonitor", and select run as administrator

Step 2.Theme Settings

Screen flip: 0 or 180 degrees can be set,

Theme: Click the drop-down box to switch between different themes

Custom information: You can enter custom information, such as CPU model, for example, enter 9900K

Step 3.Startup and Settings

1. Click the "Settings" button in the interface to pop up the settings interface
2. Check the self-starting box to start at boot
3. Click the settings in the menu to select the network card to be monitored, and the software will take effect after restarting
4. Weather forecast settings: Enter your city, click search, select your city from the list, and save it
5. Auxiliary sensor: If any unusual data are displayed, you can check it

For more information, please contact our support team support@porodo.net

www.porodo.net



porodo



myporodo



Made in China