

PORODO
LIFESTYLE



Porodo Lifestyle

Alva
Electric Bath Brush

SKU: PDLFSTAE8387GY

Table of Contents

Product Overview	2
Specifications	2
Schematic View	3
Instructions for Use	4
Facial Cleaning Method	7
Device Usage Steps	8
Safety Precautions	9
Disposal	9
Warranty	10
Contact Us	10


Product Overview

The Alva Electric Bath Brush is a rechargeable spin scrubber with a long reach handle, making it easy to clean hard-to-reach areas. It is water-resistant and comes with three interchangeable brush heads: silicone, soft bristle, and pumice stone, allowing you to cleanse, exfoliate, and massage your skin. The brush also features a portable silicone bottle with a 45 ml capacity for lotion or soap. It is charged via a USB-C port, providing convenience and extended use.


Specifications

Material	Silicone + ABS
Battery Capacity	1200mAh
Rated Voltage	3.7V
Power	5.5W
Working Time	+90 Minutes
Charging Time	2-3 Hours
Water Resistance	IPX6
Charging Interface	USB-C
Speed Level	Low Speed (200-220RPM), High Speed (260-280RPM)
Brush Model	Silicone, Soft Bristle, Pumice Stone
Product Weight	305g
Product Size	7.5 × 8.3 × 38cm
Model Number	PDLFSTAE8387

Schematic View

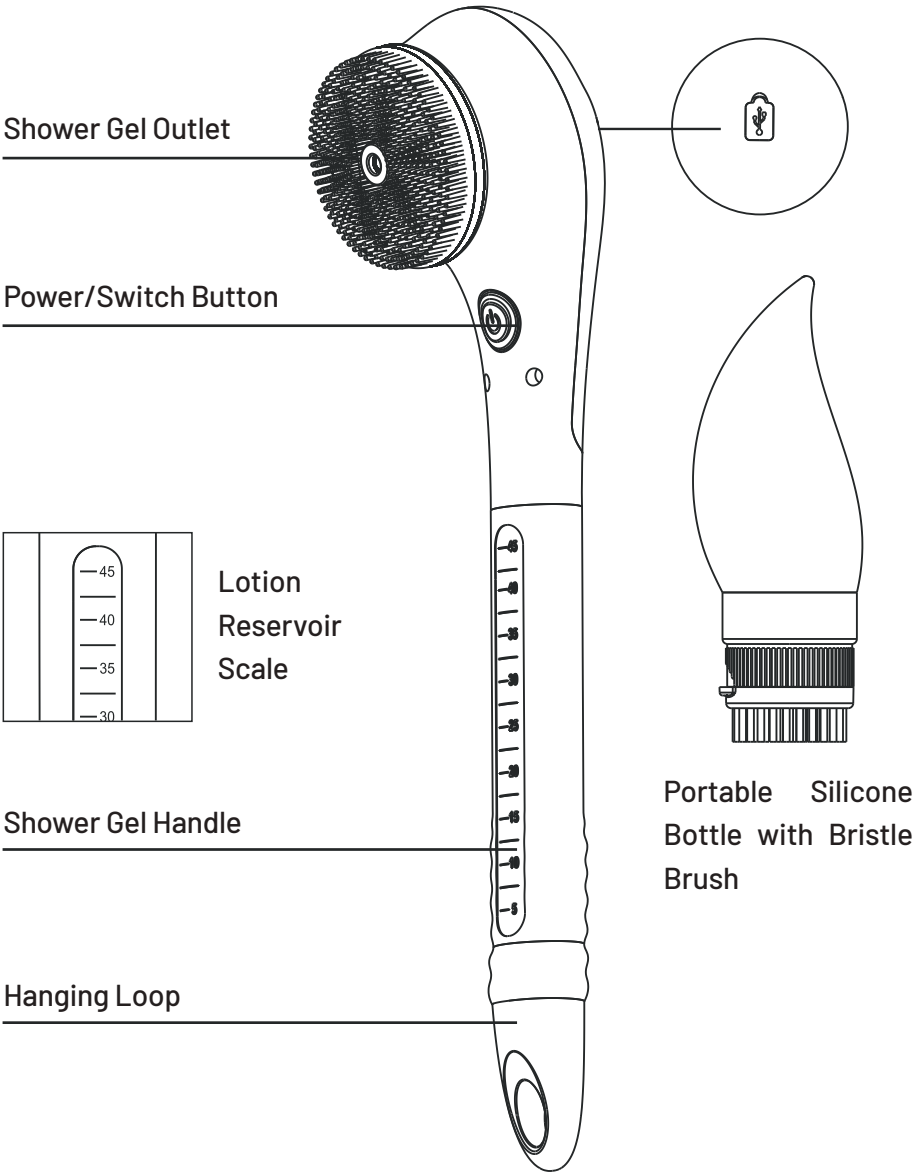


Instructions for Use

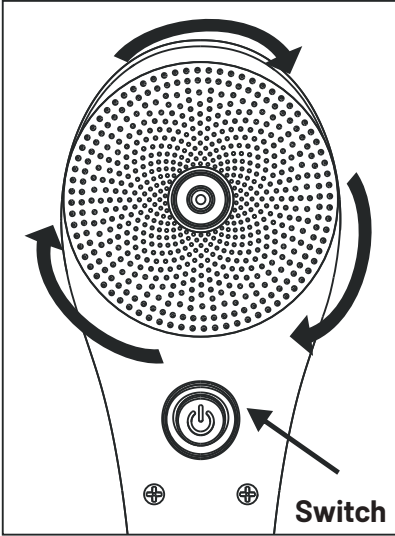


360° Rotary Clean: The device operates with high-frequency rotation to effectively remove keratin.

2 Settings: To operate the device, press and hold the switch for about 2 seconds to start. Tap the switch to switch to the second speed setting. Press and hold the switch for about 2 seconds again to power off.

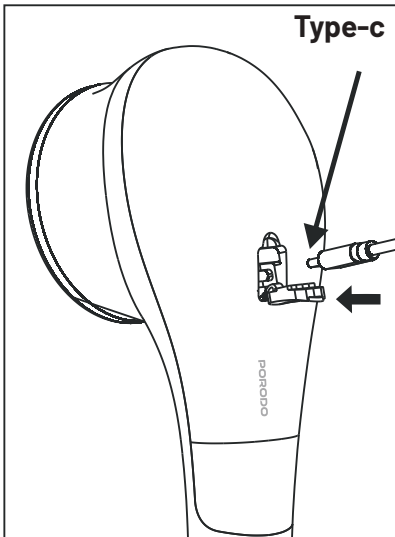


a. Charging Instructions:

- 1.** Open the dust cover located on the back of the device.
- 2.** Insert the Type-C charging cable into the charging port to begin charging.

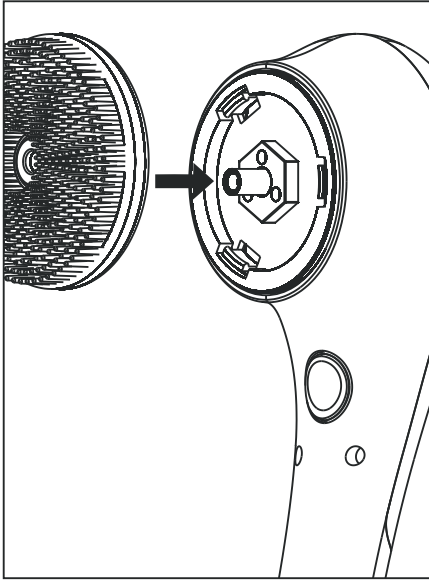


b. Body Wash Instructions:

1. Replacement Brush Head: To replace the brush head, remove the one you need and align it with the central axis of the main unit to securely attach it.

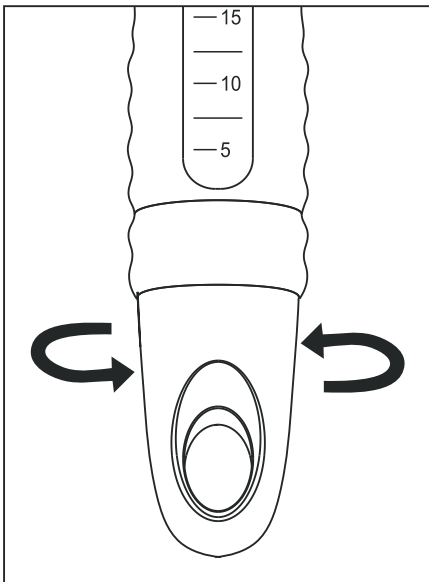


2. How to Get Shower Gel Out: To dispense the shower gel, rotate the hanging loop. The shower gel will flow out of the pipe. Squeeze it into the silicone brush head for application.

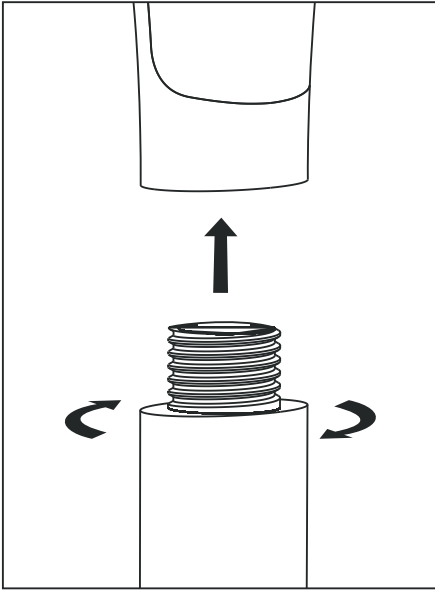

c. Shower Gel Pouring Instructions

- 1.** Rotate the lotion reservoir in the direction indicated by the arrow to expose it.

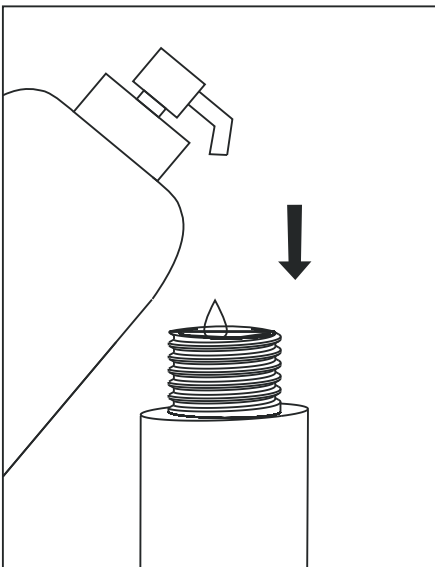

- 2.** Pour the body lotion directly into the reservoir.


Facial Cleaning Method




1. Wet your face with lukewarm water and apply facial cleanser.



2. Use the bristle brush to clean your face.

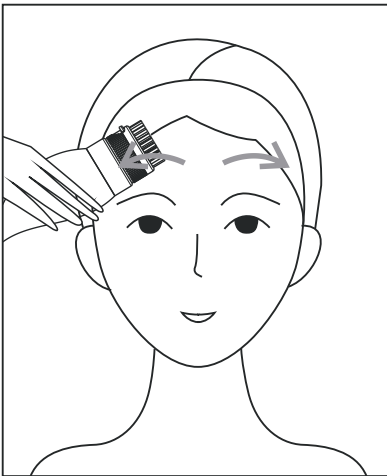


3. Deeply clean the forehead and the triangle region around the nose.

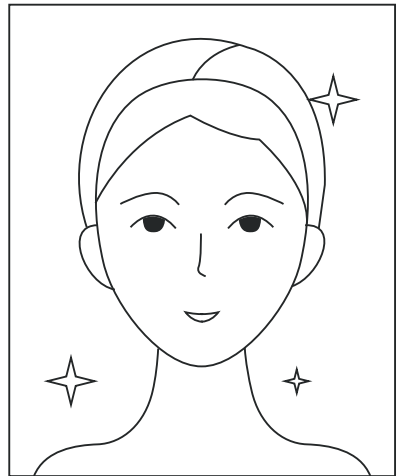


4. Rinse off the foam with warm water.


Device Usage Steps

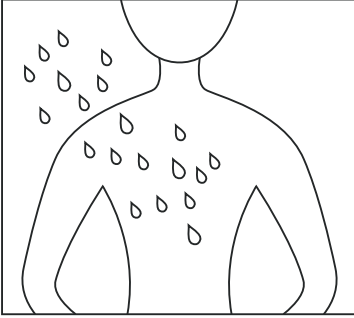


1. Bathe your whole body with warm water.

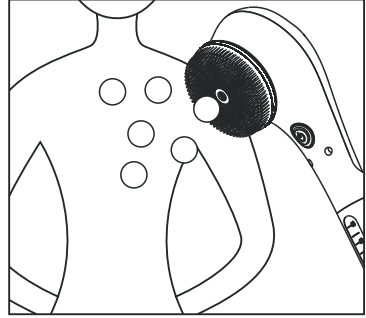


2. Rotate the switch to dispense the shower gel.

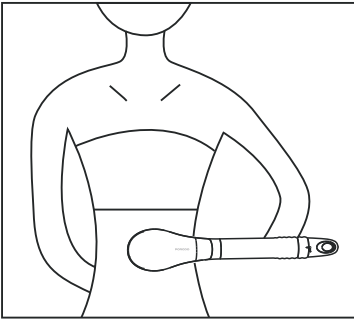


3. Clean your body with the device.

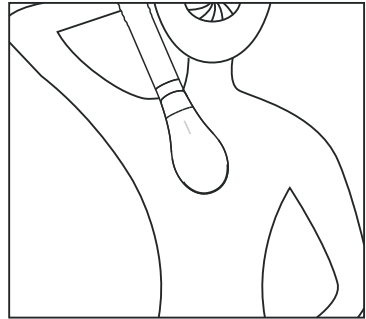

4. Deeply clean your back using the long handle.

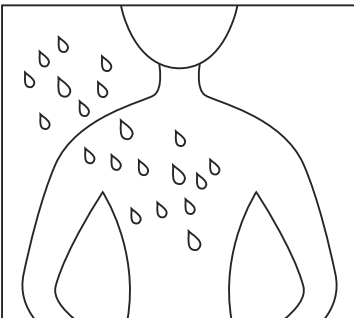

5. Rinse off all body bubbles.

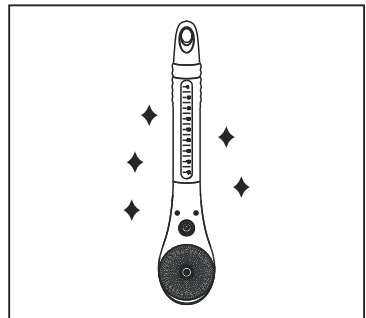

6. Place the device in a cool, dry place.

Safety Precautions

1. Before using the device, please read the instructions and warnings carefully.
2. Do not use the product if it is damaged or suspected to be damaged. Contact your distributor or the manufacturer.
3. Do not clean the product with chemical agents and keep it out of reach of children.
4. Avoid pressing too hard, as this may cause discomfort or skin issues.
5. Stop using the product if you have skin problems and consult a doctor if you experience any allergic reactions.
6. For hygiene reasons, do not share the device with others.
7. Be careful when using the product around your eyes, ensuring it does not touch them directly.
8. Do not expose the device to direct sunlight, high temperatures, or boiling water, as this may damage it.
9. Do not soak the device in water or use it in water, as this may cause damage.
10. Always turn off the device after use and store it in a clean, dry place.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**