

porodo



Porodo

**Belle Lady Smart Watch
with Rose Gold Frame**

SKU: PD-BELLE

Table of Contents

Features	2
Package Contents	2
Product Overview	2
Charging	3
App Connectivity	3
Instructions for Use	4
Function Description	5
Specifications	5
Warranty	7
Contact Us	7

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features

Featuring a 1.19-inch AMOLED display with a 390x390 resolution, this smartwatch combines elegance and technology with a sleek design adorned with stones, measuring just 39.8mm thick. It includes a single Bluetooth voice calling chip for easy communication and offers quick access to frequently used menus. The watch supports a dual time zone display and allows customization of the clock face with numerous options available through the accompanying app. It boasts an always-on display feature that can switch to a simple clock face to save energy.

Equipped with various sport modes—including walking, running, treadmill, hiking, cycling, spinning, rowing, elliptical training, stair climbing, skipping, and various aerobic exercises, plus sports like cricket, boxing, yoga, Pilates, golf, badminton, tennis, table tennis, skating, and more—the watch caters to a wide range of fitness activities. The watch is designed to monitor vital health metrics with a high-precision sensor for blood oxygen saturation levels and a heart rate monitor. Additional health tracking includes menstrual cycle and breathing pattern monitoring. Notifications for SMS, emails, calendar events, and social media activities keep you connected, while the remote shutter and music control functions enhance its usability with smartphones. This product is water resistance rated.




Package Contents

1. Smart Watch

2. Charging Cable

Product Overview

1. Touch Screen: Displays watch data. Swipe the screen to navigate through and select functions.
2. Side Button: Press and hold the side button to power the device ON or OFF. A short press toggles the display between ON and OFF or returns to the watch interface.
3. Heart Rate Sensor
4. Blood Oxygen Sensor
5. Charging Point

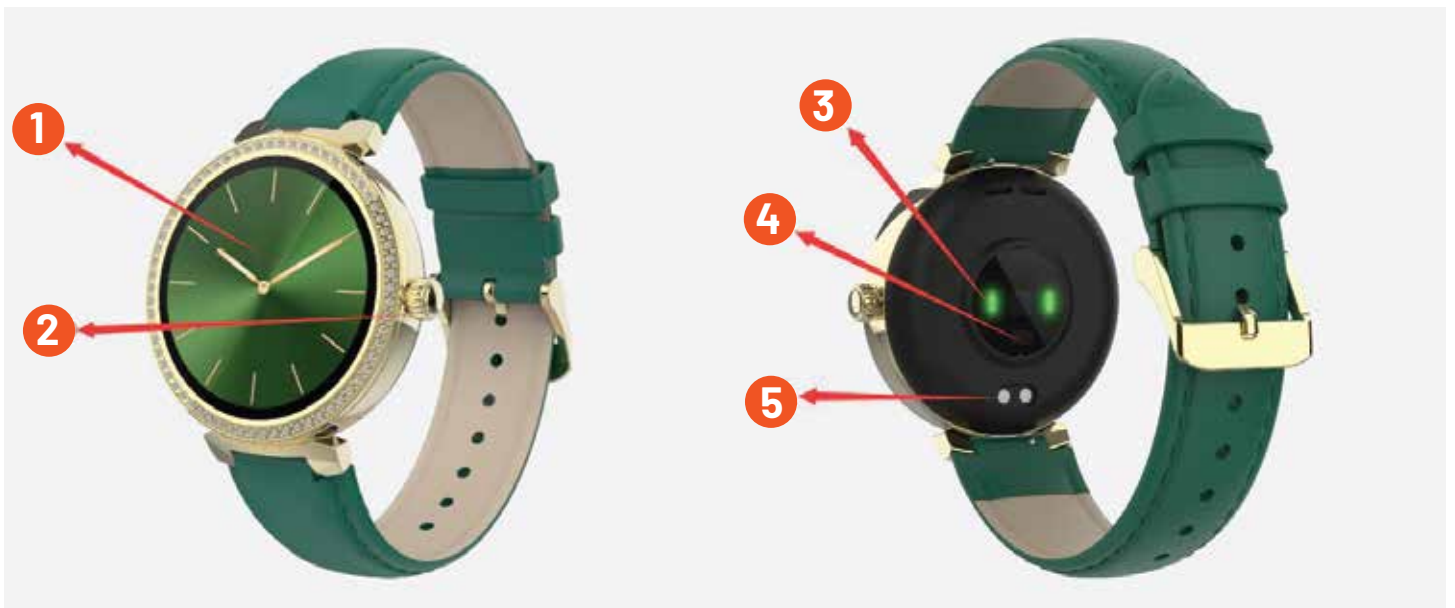

Charging

1. Ensure your Smartwatch is fully charged before using it for the first time.
2. It takes approximately 2 hours to fully charge the Smartwatch. Once connected to a power source, the Smartwatch will begin charging automatically.
3. Attach the charging cable securely to the charging pins located on the back of your Smartwatch, then connect the other end of the cable to a power source.



App Connectivity

1. Check App Compatibility

Before downloading the "Oplayer Smart Life" app, ensure it is compatible with your smartphone. The app requires iOS 10.0 or later, and Android 5.0 or higher.



Android / IOS

2. Downloading the App

Search for the "Oplayer Smart Life" app in the App Store or Google Play, or use a QR code to directly download and install the app.


3. Connecting the Smartwatch

Activate Bluetooth on your smartphone, open the "Oplayer Smart Life" app, and set up your profile. Navigate to 'Connect Smartwatch' in the settings and select the device with the name "PD-BELLE" to establish a connection.



4. Disconnecting the Smartwatch

To disconnect your smartwatch, navigate to the app settings and select "Forget This Smartwatch." For iPhone users, also go to "Bluetooth" in your iPhone Settings and choose "Forget This Device" to completely disconnect.

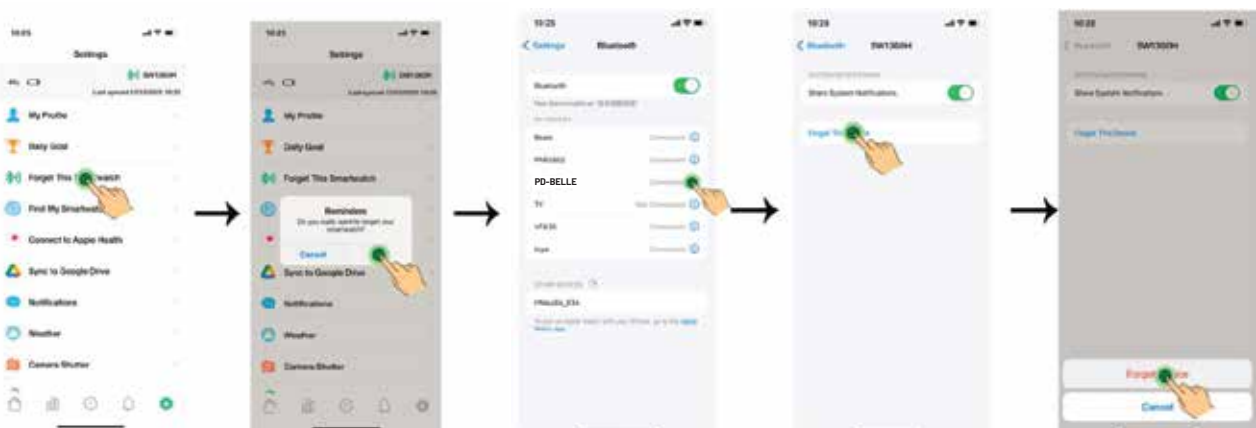

Instructions for Use

1. Powering ON

Hold the side button for 3 seconds to turn ON the Smartwatch. Swipe up, down, left, or right to navigate through additional options.

2. Menu

Access the menu by swiping your finger on the touch screen.



3. Customizing Watch Face

Once the Smartwatch is powered on and the watch face is visible, long press (hold for 5 seconds) to access and select from different clock faces to suit your style.

4. Shortcuts



Bluetooth Call Icon: This icon represents the call 3.0 Bluetooth connection. Tap this icon to enable the Smartwatch to connect via Bluetooth to your phone, allowing the device to answer calls and play music.





Screen Brightness Icon: Tap the brightness icon to adjust the screen brightness levels (+/-).



Sleep Mode Icon: This icon indicates the sleep mode feature of the watch.



About Icon: Tap this icon to view the MAC address and software version of your Smartwatch.



Settings Icon: Select the Settings icon to access the watch settings.

5. Notifications

Swipe up on the dial interface to view notifications such as incoming calls, text messages, and updates from apps like WhatsApp, Facebook, and Twitter. Notifications can be deleted automatically after they are read.



6. Accessing Menus

When the watch face is displayed, swipe right on the watch face to access and navigate through all available menus.

Function Description

1. Dial

After pairing your phone with the watch's Bluetooth, tap the designated icon to initiate a call directly from your watch.

The outgoing call was not answered.



The outgoing call was answered.



Call answered using the watch.

Switch between answering modes.


Click on the volume icon. Adjust the volume by sliding the level up and down.



Call answered using the phone.

2. Call History

The watch stores records of all incoming and outgoing calls that allows you to review your call history at any time.

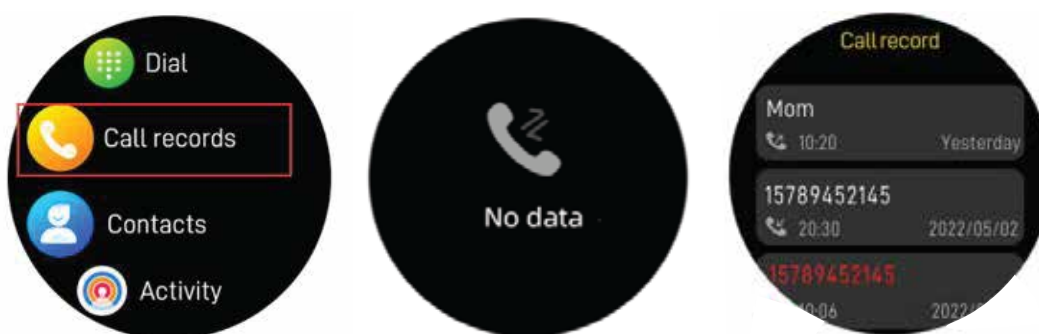

3. Contacts

Connect your smartwatch using the "Oplayer Smart Life" app. Open the app and select "Sync Contacts" in the settings to add and display contact information on your watch.




4. Multi-sport Modes

Tap the sport icon to access the multi-sport modes. To conclude your activity, slide from left to right on the screen and tap the " " icon to finish your sports session and save the data.



5. Setting Sport Goals

Tap the  icon to set your sports goals.

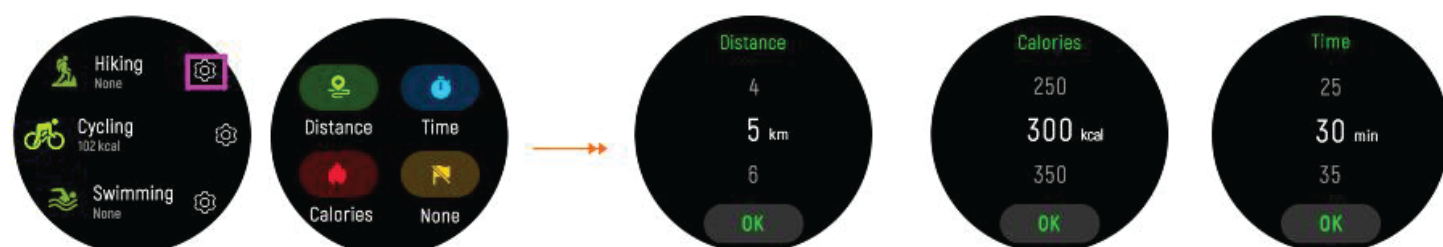


6. Reminder for Sport Goals

A reminder will appear if your sports data meets the goals you have set, helping you stay on track with your fitness ambitions.


7. Heart Rate Monitor

Tap this icon to start monitoring your current heart rate. To exit the heart rate monitor, slide from left to right on the screen.

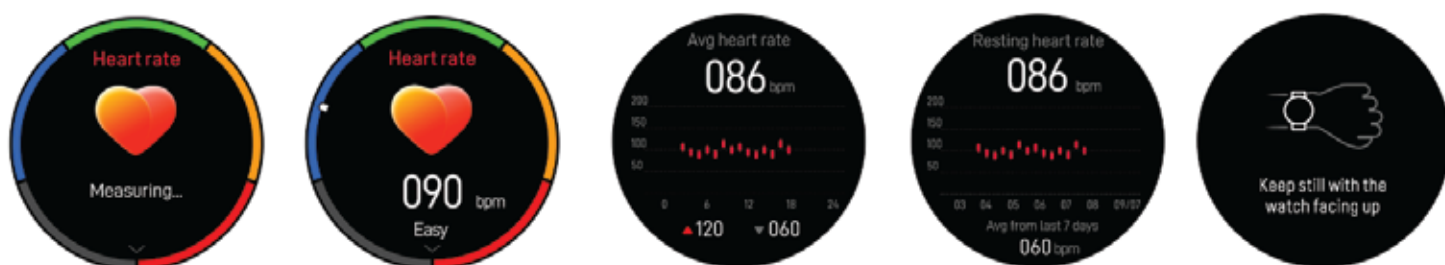


8. Blood Oxygen Monitor

Tap this icon to start monitoring your current blood oxygen levels. To stop monitoring, swipe from left to right on the screen

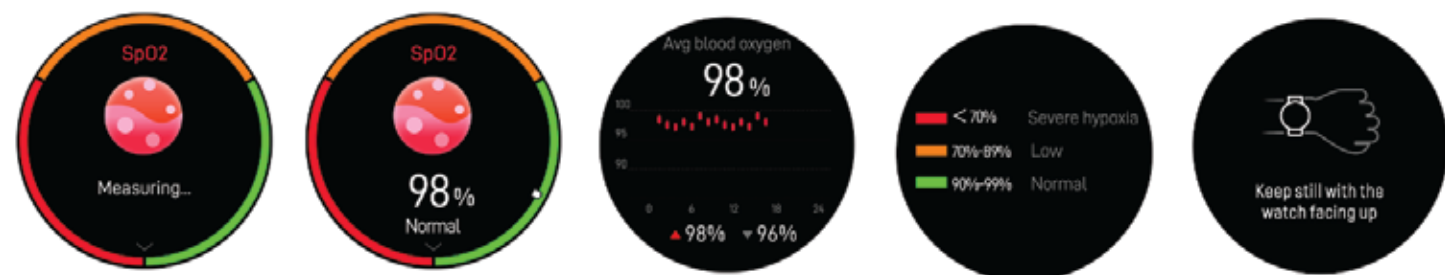


9. Pressure Monitor

Click this icon to begin monitoring your blood pressure. To exit the pressure monitor, swipe from left to right on the screen.

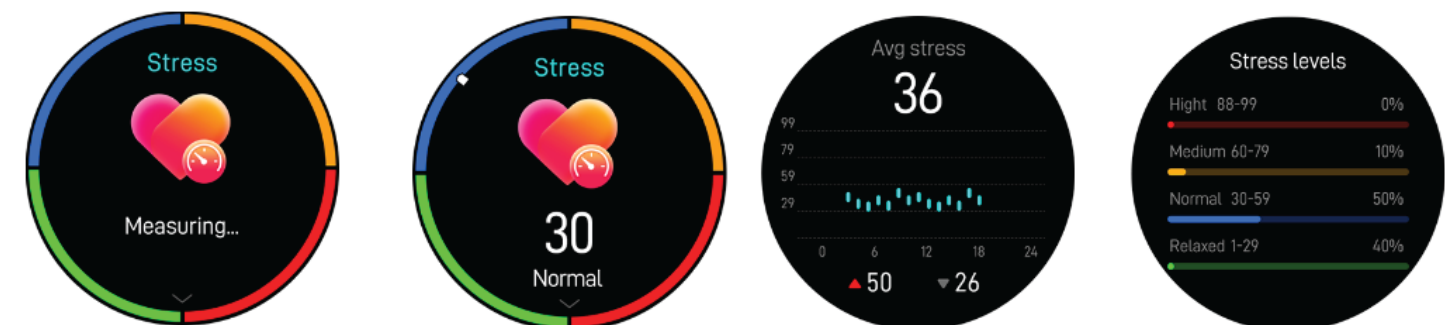

10. Sleep Monitor

Automatically monitors your sleep patterns between 9:00 p.m. and 9:00 a.m., providing insights into your sleep quality.

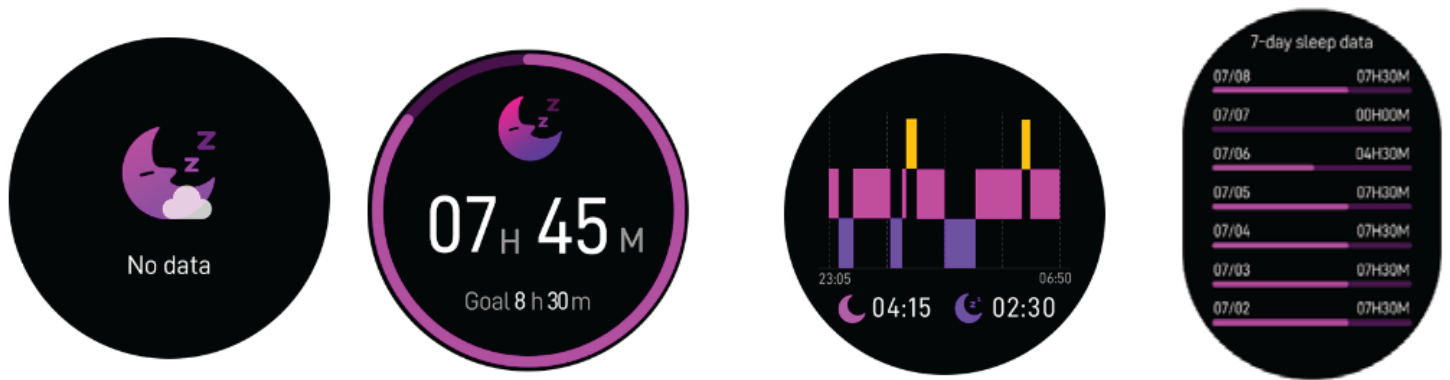


11. Weather

Displays current weather updates directly on your smartwatch when connected to the “Oplayer Smart Life” app.




12. Shutter

Use this feature to remotely control the camera on your smartphone and take pictures directly from your smartwatch.

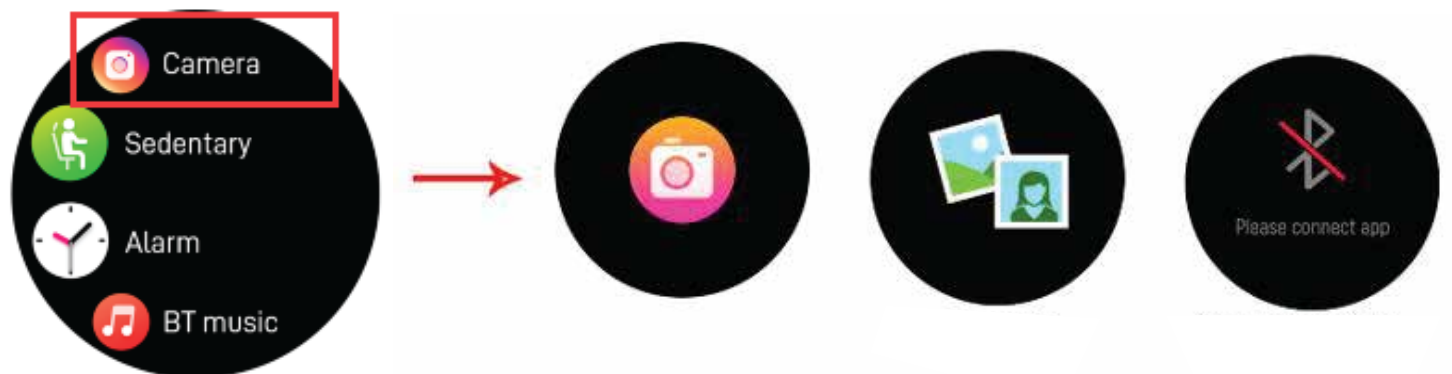


13. Music Control

Click the music icon to access the music playback control interface. Here, you can select previous/next tracks, play/pause music, and adjust the volume. To toggle the output sound between the watch and your phone, tap the icon. Swipe from left to right on the screen to exit the music controls.

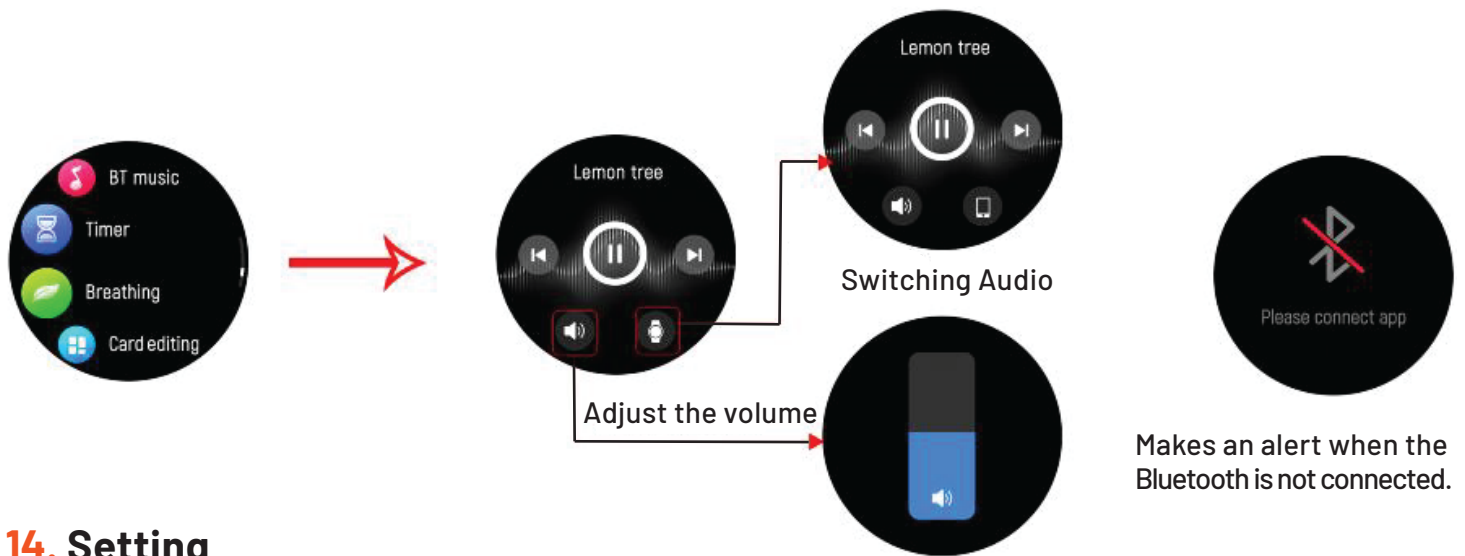

14. Setting

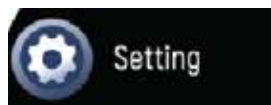

 **Find Phone:** Utilize this function to locate your smartphone if misplaced.

 **Screen Brightness:** Adjust the screen brightness by tapping the brightness icon.

 **Display Duration:** Select the desired display duration for different functions on your smartwatch, with options up to 60 seconds.

 **Watch Face Navigation:** Swipe from right to left to select the desired watch face.

 **Do Not Disturb Mode:** Activating this mode will disconnect the Bluetooth connection and restrict the watch to recording only steps, heart rate, body temperature, and blood oxygen levels.

 **Power Saving Mode:**

A. Heart Rate and Oxygen Monitoring: Disabled.

B. Alerts: All message alerts and sedentary water alerts are turned off, except for alarm clock alerts.

C. Screen Brightness: Set to the lowest setting (1st level).

D. Bluetooth Settings: Bluetooth 3.0 is turned off. Bluetooth 5.0 remains constantly on. When power saving mode is deactivated, Bluetooth 3.0 reconnects automatically.

E. Motor Vibration: Set to a weak intensity.

F. Display Settings: The dashboard remains off. Lifting the wrist or turning it will not activate the screen unless the mode is disabled.

To Return to Original Settings: To revert to the original brightness and functionality, disable the power saving mode. The brightness level during power saving mode will be maintained until changed manually.



Language Selection: Switch between different languages on your watch. Regional language settings can also be adjusted via the accompanying app.



Call Reset: To clear all contacts and call history, click 'OK'.



Vibration Settings: Adjust the vibration intensity of your watch. Options include: No Vibration, Weak, Strong.



Calculator Function: Access the calculator feature on your watch.



Reboot Device: Click 'Restart' to reboot the device. The watch will automatically cycle through a switch off and switch on sequence.



Device Reset: Click 'Reset' to clear all data stored on the device.



Power Off: Turn off your smartwatch.



Device Information: Locate the MAC address and software version of your smartwatch.



Health Monitoring: Monitors heart rate and blood oxygen levels continuously for 24 hours.



Message Notification Controls: Manage various types of message notification settings directly from your watch.



Health Reminders: Activate switches for sedentary reminders, hand raise detection, and drink reminders.

Specifications

Product Name	Porodo Belle Lady Smart Watch
SKU	PD-BELLE
Screen Size	1.19" AMOLED
Resolution	390×390
Battery	180mAh
Bluetooth Version	V 5.4
Bluetooth Name	PD-BELLE
Standard	IP68
G-Sensor	SC7A20H
HR Sensor	PAH8009 Pixart
Chipset	JieLi7012A
RAM/ROM/SPI Flash	578K/128M
Size	Φ39.9×10.9mm
Weight	60gr
Material	Zinc Alloy + ABS + Plastic
Standby Time	Up to 12Days
Working Time	1Day (Always on), 3Days (Bluetooth Connected)
Compatibility	Android 8.0 and above, iOS 12 and above

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**