



Smart Notebook & Writing Pad



Portable Design - Smart Pencil Included

Model: PD-SWNB-BK

Content

I . Product View	3
II. SmartPad Function Introductions	4
Power ON/OFF	4
Sleep and awake	4
New Page/Save Function	4
III. Pen Function Introductions	5
Sleep and awake	5
Pen calibration method	5
Replace the tip	6
IV. How to Use eDraw APP	6
1. Android and iOS Operation Instructions	6
2. Windows and Mac Operation Instructions	10
V. Charging	11
VI. Parameter	12

I . Product View

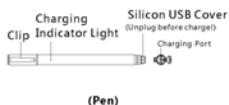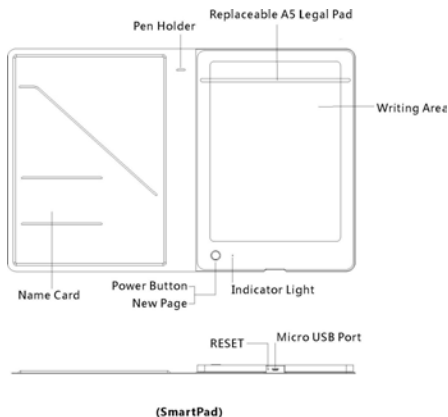

Note:

1. SmartPad supports Windows, Mac, Android and iOS systems.
2. There are slightly differences between the product pictures and actual appearance; the pictures in the manual are used for instruction purpose only. Please refer to your actual product for the functions and parameters.
3. Try to reset the device by inserting a pin into the RESET hole meanwhile the indicator light goes off when the device not respond. It springs and the indicator light is on when the device is well.
4. Do not place SmartPad on the metal, mobile phone or PC and other objects that may interfere with the signal for writing.
5. eDraw APP will be updated periodically for better experience and be sure your APP is the latest.

II. SmartPad Function Introductions

Power ON/OFF

- Press the power button for 3 seconds to power on/off.

Green LED: Normal work mode

Yellow LED: USB connected to PC

Highlighting: The pen is within the SmartPad work area

Sleep and awake

- If out-of use for 1 hour, the SmartPad will go asleep and the indicator light goes off.
- When the SmartPad cover is closed or folded, if out of use for 3 minutes, it also will go asleep and the indicator light goes off .
- Flip the cover or press the power button to awake, the indicator light will be on.

New Page/Save Function



- Click the “” on the APP to save, it is ready to new page on eDraw APP.

- Press the power button for 0.5s and release, now the indicator light flashes 3 times to save the notes , meanwhile empty the notes on the SmartPad, it is ready to new page on eDraw APP.



SAVE ATTENTION

- If the ” **eDraw** “ APP real time display writing, it synchronized to APP;
- If USB connection, user need manually save your notes on the PC.
- If use SmartPad alone, it stores in the SmartPad and upload the next time connection ” **eDraw** “ APP.

- When the SmartPad memory is full, the red and green indicator lights will alternate be on or under USB connected to PC the red and yellow indicator lights will alternate be on or the pen within the SmartPad work area, the red indicator lights will highlight. Please timely Synchronize your works to APP.


III. Pen Function Introductions

Sleep and awake

If out-of use about 5 minutes, the pen will go asleep. You can draw again to awake it.

Pen calibration method


- 1) When the SmartPad is on, use the pen tip touch the SmartPad screen to make sure the pen is working;
- 2) Keep pressing the power button and then insert the pin into reset hole till the red indicator light on. When loosen the button, the pen entering calibration status;
- 3) Put the pen tip near the SmartPad writing area (Best is turn the last page of A5 Legal Pad) as close as possible;

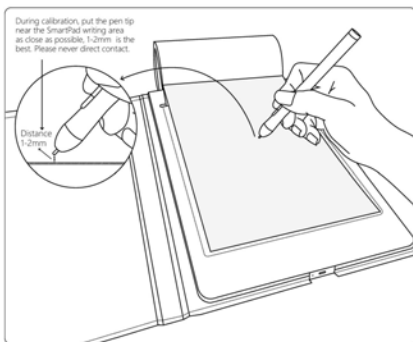

- 4) If the red high light turns green highlight once, then normal green, it means the calibration is successful;

- 5) If the red highlight becomes red highlighted flash five times, it means the calibration fails, please follow steps 1.2.3 and calibrate again.

Replace the tip

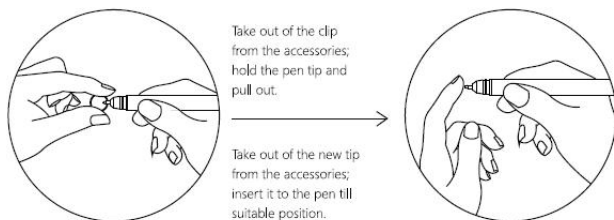

Note: Stylus refill is suitable for color filling.

IV. How to Use eDraw APP

1. Android and iOS Operation Instructions




- (1). Download and install " **eDraw** " APP in your mobile phone

User can scan below QR or search "eDraw" in APP Store/Google Play to download.




(Android 6.0 or above and iOS 9.0 or above)

(2). New My Notebook

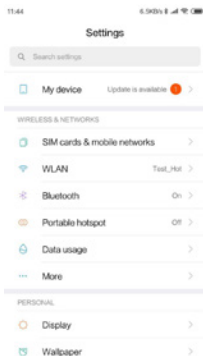

a. Turn on your phone Bluetooth and network.

Suggest open GPS, or it may fail to scan Bluetooth if Android APP.

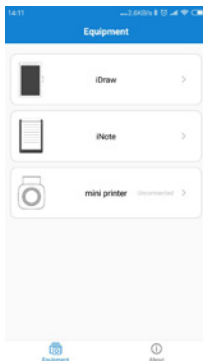

b. Choose Equipment

open “**eDraw**” APP, click the Menu bar “**Equipment**” -> “**iNote**”;



c. New the Notebook

click “” to new my notebooks,
please enter the Notebook name.



d. New notes

Click the notebook to note
interface, then click the “” on
the top right corner to new note.

(Suggest after Bluetooth
successfully connected, then enter
note name)



e. Bluetooth Connection

“ **eDraw** ” APP will automatically scan the SmartPad and connected.

FAQ

Q: If fail to connect, how to do?


A: You can try below methods:

- 1) Reset the device by inserting a pin into the "RESET" hole for 3 seconds.
- 2) Remove the device from eDraw APP-About-My equipment.
- 3) Turn on your phone Bluetooth again.
- 4) Restart eDraw APP and make sure it is latest version.

f. Take Notes :

- ✓ When the indicator light highlights once, it means Bluetooth connected successfully and it enters synchronous writing mode. Write on the SmartPad, meanwhile it synchronizes on this board.
- ✓ Suggest enter note name, then take notes.
- ✓ After notes, please click the “  ” on the top right corner to save or press the power button for 0.5s and release, now the indicator light flashes 3 times to save the notes , meanwhile empty the notes on the SmartPad



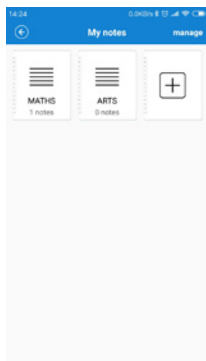

g. Manage My Notebooks

It can move, recompile, and delete the notes and so on.

(3). Two methods to store the notes , as follows :


a. Synchronize note

After Bluetooth connected successfully, notes will synchronize on APP board.

b. Upload historical works


After new my notebook, click “+” on the top right corner and select upload history Notes, then follow the pop-up prompt to complete.

2. Windows and Mac Operation Instructions

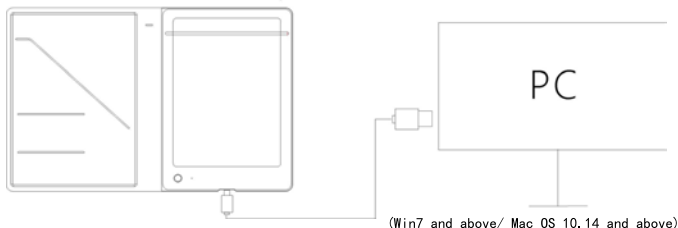

Turn on the SmartPad and connected to PC via USB line, PC bottom right will pop up successfully install the device driver, now you can use. Writing SmartPad equals input unit of SMARTPAD, now the yellow indicator light is on. When the pen is within the SmartPad work area, the yellow indicator light will highlight.

V. Charging

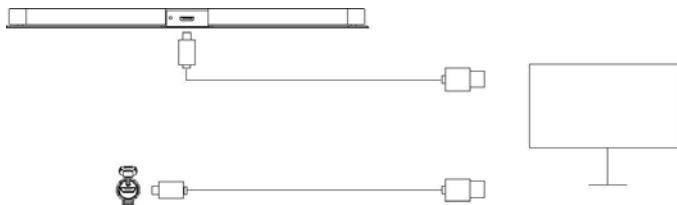

Charging for SmartPad

When the SmartPad is off, connect one end of USB cable to the SmartPad charging port, the other end to PC. The red indicator light is on when charging; light will go off when full charged

Note: Please charge first when the red indicator light blinks means low battery.

Charging for Pen

Unplug the silicon USB cover and then connect one end of USB cable to the pen charging port, the other end to PC. The red indicator light is on when charging; light will go off when full charged

Caution : Do not disassemble, impact, or put it into fire. If there is severe bulging, please do NOT continue to use. Do not put it in high-temperature environment.

VI. Parameter

SmartPad Dimension : 261*210*10 mm

SmartPad Capacity : 460mAh

Input : 5V/1A

Charging Time: About 2-3 hours

Available time : About continuous use for 24 hours

Memory Storage : About continuous use for 8 hours

Pen Dimension: 157.0*14.55mm

Pen Capacity: 80mAh

Input : 5V/1A

Charging Time : About 1-2 hours

Available time : About continuous use for 200 hours

Induction Method : Electromagnetism

Paper Size : A5

Maximum Identification of paper thickness : 15mm

Connection Type : Bluetooth 4.0/USB

For more information, please contact our support team:
support@porodo.net

www.porodo.net



porodo



myporodo