


porodo | CHOOSE THE BEST
Trainer Neck Massager
Relaxer & Posture
SKU:PD-RPTNMS

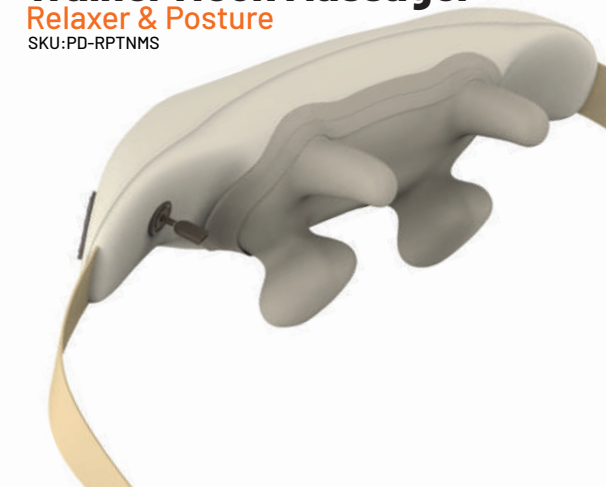

Before installing and using the product, please carefully read this User Manual to guarantee correct usage. (Please keep this instruction manual securely for future use.)

Caution

1. This product is not a medical device, and is not suitable for diagnostic, treatment or other commercial purposes.
2. Before use, please remove any jewelry on the massaged area to avoid interference with the massage function.
3. If you experience pain or discomfort in the massaged area during use, please discontinue use immediately.
4. If the product exhibits any abnormal behavior, cease operation, do not attempt to disassemble or repair it yourself.
5. As the massager has a heating surface, those with heat sensitivity should use caution.
6. When operating the device in specific environments, adhere to all relevant safety regulations.

Product Protection

1. Charge the product using the supplied cable and a standard adapter. Monitor the charging process to avoid any issues.
2. Keep the product away from water, fire, and corrosive substances.

Necessary Knowledge

About Frequency of Use

- *Use as needed, for no more than 10 minutes at a time. A test run is advised before the first use.
- *Overuse may lead to physical discomfort or skin damage.
- *Observe your skin and physical response when using the product for the first time, reducing usage time if necessary.

Cautions Before Use

- *Adopt a comfortable position and relax fully before using this product.
- *Discontinue use immediately if skin pain or discomfort occurs and consult a healthcare professional.

State After Use

- *It is normal for the massage area to appear red and feel warm after extended use.

Cleaning

- *To clean the product, use a cloth moistened with water or 75% alcohol. Wipe the surface gently without soaking.

Product Details

Product Name	Porodo Relaxer & Posture Trainer Neck Massager
Model	PD-RPTNMS
Voltage	5V DC
Battery	2000mAh
Product Weight	1188g
Charging	Type-C
Dimensions	(mm)L245xW170xH160

Control Panel



- Indicator Light
- Power on/off
- Mode
- Heating
- Speed

Prepare Before Use

Please ensure the product and accessories are complete and undamaged. Hold the power button for 2 seconds to activate the device.

***Mode Selection**

The device defaults to mode 1 upon startup. Press the mode button briefly to alternate between mode 1 and mode 2.

***Heating Mode**

Upon activation, the device begins in high-grade heating mode. Short press the heating button to cycle through high heating, low heating, and off.

***Intensity Mode**

The device starts on low intensity. Press the intensity button shortly to switch between low and high intensity.

***Power Off**

The device will turn off automatically after 10 minutes of use. To turn off manually, press and hold the power button for 2 seconds.

Charging

- 1-The device cannot be operated while charging.
- 2-Connect the charging cable to the device's charging port.
- 3-The device enters a self-protection mode during charging and will not function.
- *It's normal for the device and charger to become slightly warm while charging.
- 4-After charging, disconnect the device from the power source.

5-The batteries are built-in and not replaceable.

6-An adapter is not included; a mobile phone charger can be used.

Notice

- 1-Before disposal, remove the battery as prescribed by regulations.
- 2-Power off the device before battery removal.
- 3-Dispose of batteries responsibly, in line with legal and environmental standards.

*Do not attempt to disassemble the device if you are not a professional.

Steps to Remove the Battery:

- 1-Disconnect the device from any power source.
- 2-Power off the device.
- 3-Carefully disassemble the battery.
- 4-Dispose of the battery at an appropriate recycling center.
- 5-Adhere to environmental protection regulations.

Storage

When the storage period exceeds 3 months, inspect and recharge the device before use. Avoid placing it close to the ground, walls, and roofs, and ensure the storage area is well-ventilated, free from strong sunlight, and corrosive gases.

Transportation

The product's packaging includes shockproof features suitable for air, rail, road, and sea transit. Protect against rain, splashing, inversion, and collision.

Power Check

Before use, verify the power supply voltage is within the specified range. Do not operate the device if the voltage is inappropriate.

Maintenance

Protect the device from moisture, rodents, and pollution. Always turn off after use, store safely, and ensure no heavy items are placed on it. Only professionals should attempt repairs; non-professionals must not disassemble the device.

Disposal and Recycling

Dispose of this device in accordance with local environmental regulations, not with household waste.

Troubleshooting

If the device ceases to function, charge it fully before retrying. If issues persist, try an alternative charger compatible with the device's voltage. Contact customer service for further assistance.

Attention

1. Read the instructions thoroughly to prevent muscle pain from overuse.
2. Do not use in a prone or semi-reclined position.
3. Avoid using the device for tasks requiring concentration, like operating machinery or driving.
4. Do not use on body parts that have recently been operated on or show signs of inflammation or skin conditions.
5. People with heart conditions, acute diseases, bleeding disorders, or other health issues should avoid using this device.
6. It is not suitable for those with movement, cognitive, or intellectual disabilities without following a doctor's advice.
7. Avoid using during pregnancy or menstruation.
8. Store in a location inaccessible to children.
9. Children under 8 should not use the device; those between 8-12 require adult supervision.
10. Avoid puncturing or scratching the device with sharp items.
11. This product should be operated under supervision if the user lacks the physical, sensory, or mental capabilities, or lacks experience and knowledge.
12. Supervise children to ensure they do not play with the device.
13. Use only with an adapter that meets the device's voltage requirements.

Contact Us

If you have any questions about this Privacy Policy, please contact us at: info@porodo.net
Website: porodo.net
Service Support: support@porodo.net
Instagram: [porodo](https://www.instagram.com/porodo)