

PORODO
LIFESTYLE



Porodo Lifestyle

**Wax Warming Hair
Removal Kit**

SKU: PD-LFST093

Table of Contents

Safety Precautions	2
Specifications	3
Product Components	3
Instructions for Use	3
Disposal	4
Warranty	5
Contact Us	5

Safety Precautions


Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

- 1.** Keep away from children, infants, and pets.
- 2.** If the supply cord is damaged, it must be replaced by a service agent, or similarly qualified personnel to prevent any hazards.
- 3.** Children must not play with the appliance.
- 4.** The appliance is designed to heat wax for removing hair from nose, ears eyebrows, and mustache.
- 5.** To prevent burns, electrocution, fire, or injury, never use the appliance if:
 - The cord or plug is damaged.
 - The appliance has been damaged.
 - The appliance is not functioning properly.
- 6.** Keep the cord away from heated surfaces.
- 7.** Always use the appliance on a flat, stable surface.
- 8.** Do not immerse the appliance in water or any other liquid. Keep the surrounding area dry.
- 9.** Do not place or store the appliance where it may fall or be pulled into a tub or sink.
- 10.** If the appliance falls into water, do not reach into the water. Unplug the appliance immediately.
- 11.** Do not wrap the cord around the appliance while it is in use.
- 12.** Unplug the appliance after use. Allow it to cool before handling, cleaning or storing.
- 13.** Keep the appliance out of reach of children. The machine will remain hot for an extended period after use.

Specifications

Power	6W
Voltage	DC 5V/1A
Constant Temperature	53°C
Certification	CE(EMC), FCC
Anti-Electric Shock Level	III
Product Size	63×53×28mm
Wax Melting Time	5 to 7min


Product Components

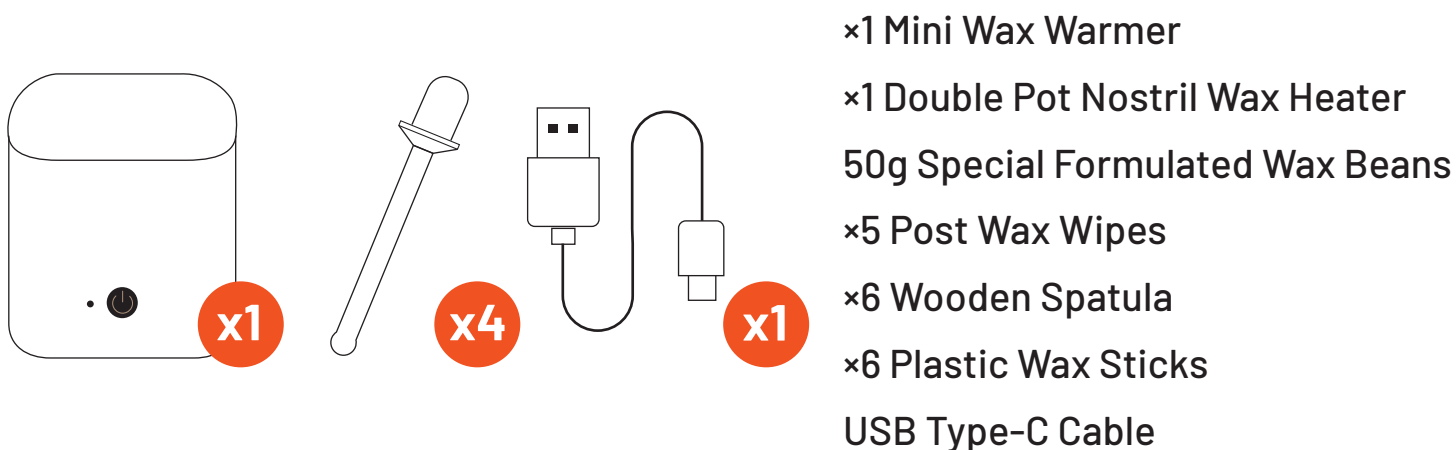


Instructions for Use

1. Unwrap the wax applicator and place the wax into the heater.
2. Plug in the power cable. The blue light will flash when the appliance is connected to power.
3. Press the power button to turn the appliance on. The light will turn red to indicate that it is working.
4. Constant temperature heating: Once the wax is ready for use, the light will turn purple and continue flashing. It will maintain this temperature until powered off. Wax melting time: DC 5V / >1A takes 5 to 7 minutes (currents below 1A are not supported).

5. Remove the wax applicator from the heater and immediately insert the applicator into the nose or ear. Do not move or twist the applicator once it is inserted.
6. Wait 1 to 2 minutes for the wax to completely harden.
7. Hold the applicator firmly and pull in one swift motion. (The quicker the pull the more effective the hair removal result.)
8. Repeat the process for the other nostril or ear.
9. Press the power button to turn off the heater when not in use.

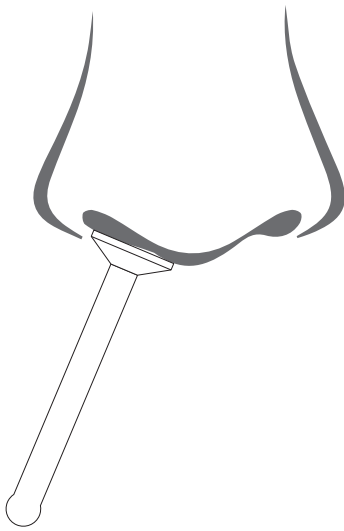

WORKS ON NOSE

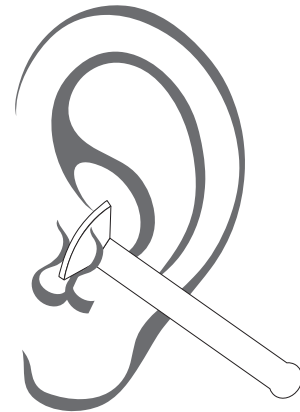

WORKS ON EARS

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**