




3-in-1 Dual Coil Wireless Charging Dock

MODEL: PD-FWCH015


Specification

Product	3 in 1 Wireless Charging Station
Input	9V/2A
Output	For Phone 15W (Max)
	For Wireless Earbuds 3W
	For Apple Watch 2W
Charging Distance	0.24 inch (6mm)
Working Temperature	32-100° F
Suitable Equipment	iPhone8 - iPhone 14 series
	Android phone with wireless charging function
	Airpods / AirPods Pro, Galaxy Buds
	Apple Watch 2-8, Ultra
Package List	Wireless charger x 1, UM x 1, Charge cable x 1

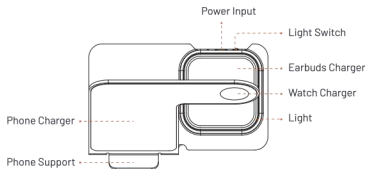

Steps

1. Connect the wireless charging station to suitable PD or QC adaptor with charge cable.
2. Place the phone on the stand vertically or horizontally, the phone will be in charging, same time the blue light will gradual change. If the blue light and green light blinking I please check whether your phone is placed correctly, or a credit card / metal ring inside the phone case. The light can be turn off by the backside switch.
3. Place Airpods on the Earbuds Charger, it will be in charging.
4. Place the Apple Watch on Watch charger, it will be in charging.

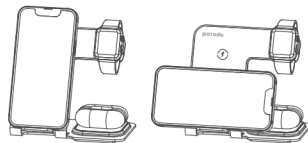

***Notice:** Place the phone on the middle of the support, make sure the thickness of the big phone case such as iPhone 14 Pro Max shouldn't exceed 0.24 inch (6mm), otherwise will lead to low charge speed, even stop charging.

Warnings

1. Make sure your phone supports wireless charging.
2. Please do not place metal / magnet / credit card on the cell phone or phone case, it will block the wireless charge.
3. Do not use the cell phone case which is more than 0.24 inch thick, otherwise it will not be able to charge.
4. Do not disassemble, bump, squeeze or put the product into the fire.
5. Do not use the product under the condition of the high temperature, humidity or corrosion, so as to avoid electric leakage in the circuit.
6. Do not splash water or other liquids on the wireless charger. If cleaning is required, make sure the power is disconnected.
7. Keep the distance between the implanted medical device (pacemaker, cochlear implant, etc) when charging, and the wireless charger at least 8 inch to avoid potential interference to the medical device.
8. When using the DC charger for power supply, please make sure your charger adapter support DC charge, and its max power is more than 18W.
9. Please keep the product out of the reach of kids.

Designed and manufactured by
Teqtronix Inc. All rights reserved 2023.

For more information, please contact our
support team support@porodo.net

www.porodo.net



Made in China