

PORODO



Porodo

Audix Lavalier Microphone with Type-C and Lightning


SKU: PDLAMPHF2BK

Table of Contents


Preface	2
Product Overview	2
Instructions for Use	3
Function and Indicator Guide	5
Package Contents	6
Specifications	6
Disposal	7
Warranty	7
Contact Us	7

Preface

Thank you for choosing our product. This smart wireless microphone provides professional-grade audio recording with a simple plug-and-play setup—no app required. It is versatile and can be used for various purposes, including online live broadcasts, video vlogs, program interviews, recording sessions, video teaching, and more. The wireless microphone consists of two parts: the microphone transmitter and the receiver.


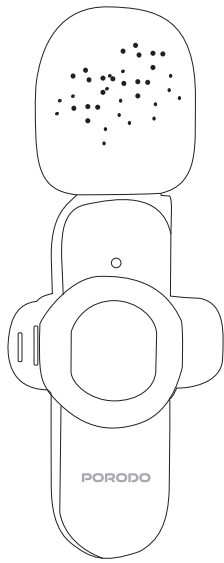


Microphone Transmitter

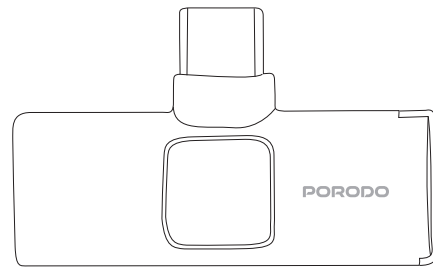

Receiver


Receiver

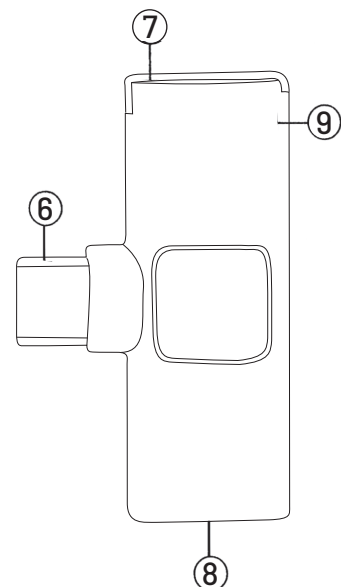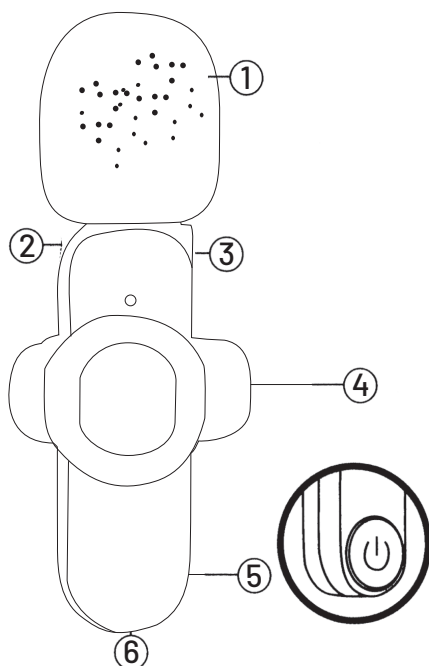


1. Windproof Net
2. Microphone Indicator
3. Microphone Charging Port
4. Microphone Clip
5. Switch Key
6. Port to Connect Phone
7. Receiver Indicator
8. Port of Receiver
9. Rope Hole

Instructions for Use


Step 1: Connect the receiver to the mobile phone's interface. The indicator light will flash to signal that the connection is successful.

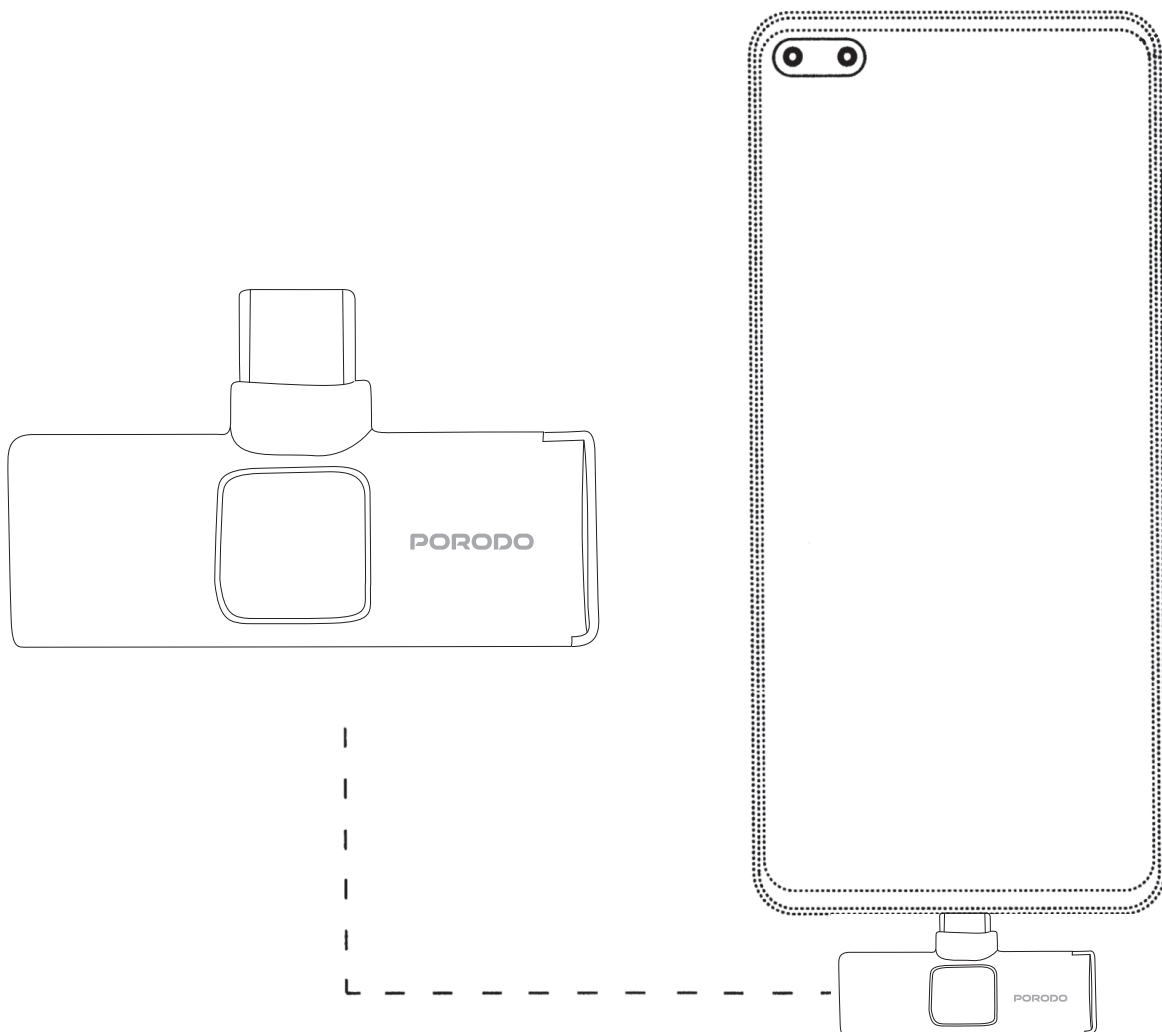

Step 2: Press the power button on the microphone. The red and blue indicator lights will flash, and the blue light will continue to flash until it remains solid. This indicates that the pairing is successful.

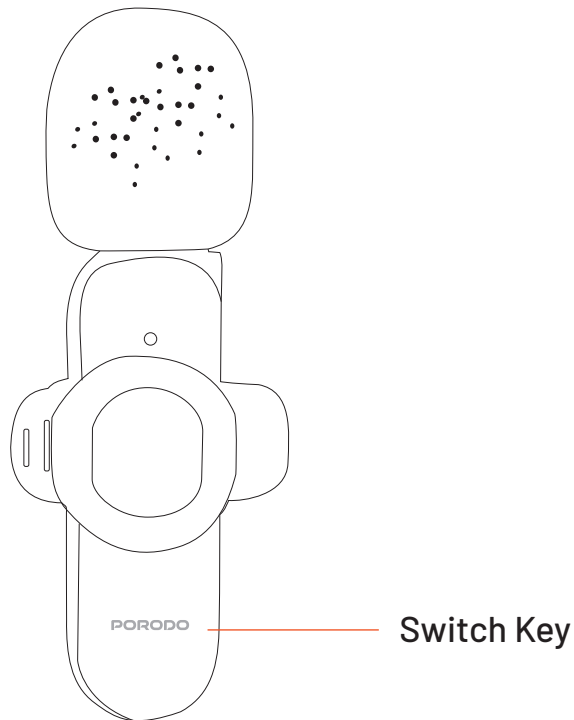

Step 3: The indicator light on the receiving end will remain solid. Once this happens, the phone can use the microphone to pick up sound by opening the camera, live video, or other apps.

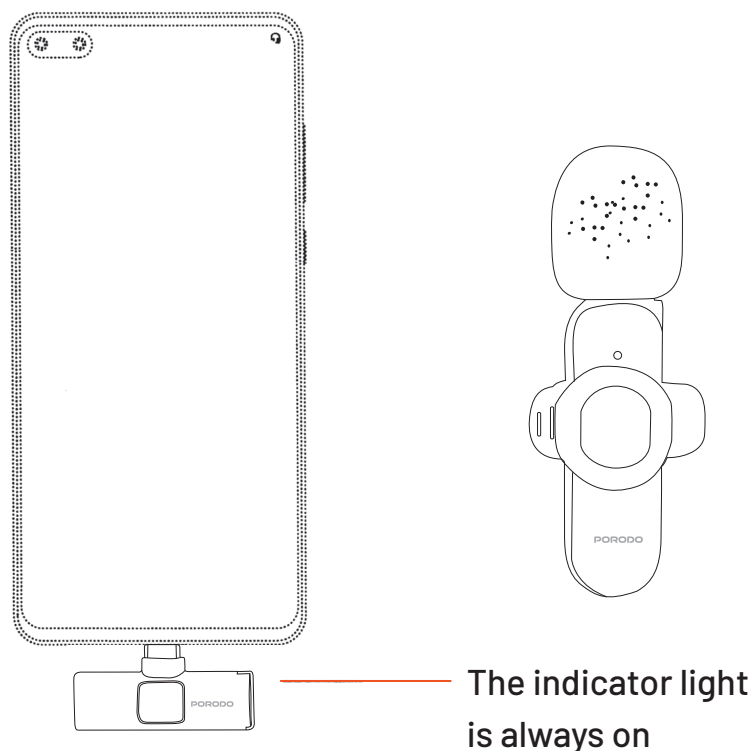

Microphone Transmitter

Function	How to Use	Light
Power On	Press the switch key once	Green light is on
Power Off	Press and hold the switch key for 3-4 seconds	Green light flashes
Charging	—	Lights off
Pairing	—	Green light flashes slowly
Paired	—	Green light is always on
Low Battery Alarm	Battery is below 20%	Green light flashes slowly

Receiver

Function	How to Use	Light
Power On	Plug in the device	Green light shining
Power Off	Plug off the device	Light off
Pairing	—	Green light shining
Paired	—	Green light is always on

Package Contents

Microphone Transmitter
Receiver
Charging Cable

Specifications

Battery	40mAh (Microphone)
Input	5V/2A, 10W
Working voltage	Lithium Battery 3.7V
Working current	<15mA
Charging Time	1 Hour
Working Time	Up to 3 Hours
Transmission Distance	15m-20m
Microphone sensitivity	-38dB
Model Number	PDLAMPHF2

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**